

BASIC INSTRUCTIONS TO CONFIGURE ZYXEL P8701T CPE USING THE WEB INTERFACE

Version 1.0

12/11/2012

Index

1	INTRODUCTION	1-1
2	FACTORY DEFAULT SETTINGS	2-1
3	CPE BASIC OPERATIONS	3-1
3.1	PASSWORD MODIFICATION	3-1
3.2	CONFIGURING THE ROUTER	3-2
3.2.1	MULTIUSER SETTINGS	3-2
3.2.2	MONOUSER SETTINGS	3-10
3.3	PORT FORWARDING	3-16
3.4	CONFIGURING THE WIRELESS LAN	3-17
3.5	OTHERS OPERATIONS.....	3-21
4	USB INTERFACE.....	4-1
4.1	3G BACKUP	4-1
4.2	FILE SHARING	4-1
4.3	PRINTER SERVER	4-2

1 INTRODUCTION

This document provides some indications about how to configure the VDSL2 ZyXEL P8701T, supplied as Telefonica *Home Station VDSL2*, using the web configurator built-in this device.

To configure the broadband service provided by Telefonica, it is recommended to follow the instructions covered in the *User's Guide* included in the package. This document is a complementary element to that user's guide explaining how to configure the router using the VDSL2 router web configurator instead of the configuration wizard included in the router package valid for the Windows OS. It is recommended to use with higher preference this configuration wizard.

<u>NOTE:</u> Before starting to use the configuration tools provided directly by the CPE vendor, the ones which Movistar mentions just for reference purposes, we must remind you that Movistar doesn't provide any kind of technical support for them.
--

This configuration process is based in the **access to the router** using the **PC network adaptor**, which will allow using it independently of the operating system. Refer to the help information in your operating system to see how to have a network adaptor properly installed.

This document is oriented to **advanced users** with enough knowledge about networks, routers, operating systems, etc...

2 FACTORY DEFAULT SETTINGS

The VDSL2 router supplied within the Home Station VDSL2 package is pre-configured by factory default settings in a dynamic multiuser mode, with the DHCP server enabled (this is, it will assign an IP address to those PCs in the internal network configured to obtain the IP settings dynamically) and the wireless LAN interface disabled. To gain the access to the router, it is necessary to have a network adapter installed on the PC, configured to receive an IP address automatically from the DHCP server and with a web explorer configured accordingly with the dynamic multiuser settings.

NOTE: The router must be switched on and properly connected to the PC.
--

If you are using a Windows operating system, you can refer to the *Ethernet Card and TCP/IP protocol installation guide* document and the annex 1 of the *Installation Guide* for more detailed information. If you are using a Linux or MAC operating system, please refer to the help information in your OS.


In case these initial settings could not be useful for your particular case or you find some problems in the broad band service start-up process, you can update or review the configuration using the router web GUI. As the VDSL2 router will be initiated with the LAN IP address 192.168.1.1 and network mask 255.255.255.0, you can check your connectivity with the router (i.e., using a ping command). Once the IP connectivity was successfully checked, you just need to access the <http://192.168.1.1/main.html> address from your web explorer.

NOTE: The screenshots in this document may change in function of the web explorer and the operating system used.
--



Figure 2-1: Router access

The factory default values for the CPE *Username* and *Password* parameters are *1234* and *1234* respectively. **Telefónica highly recommends to modify the default access password to the router.** Refer to section 3.1 - **PASSWORD MODIFICATION**.

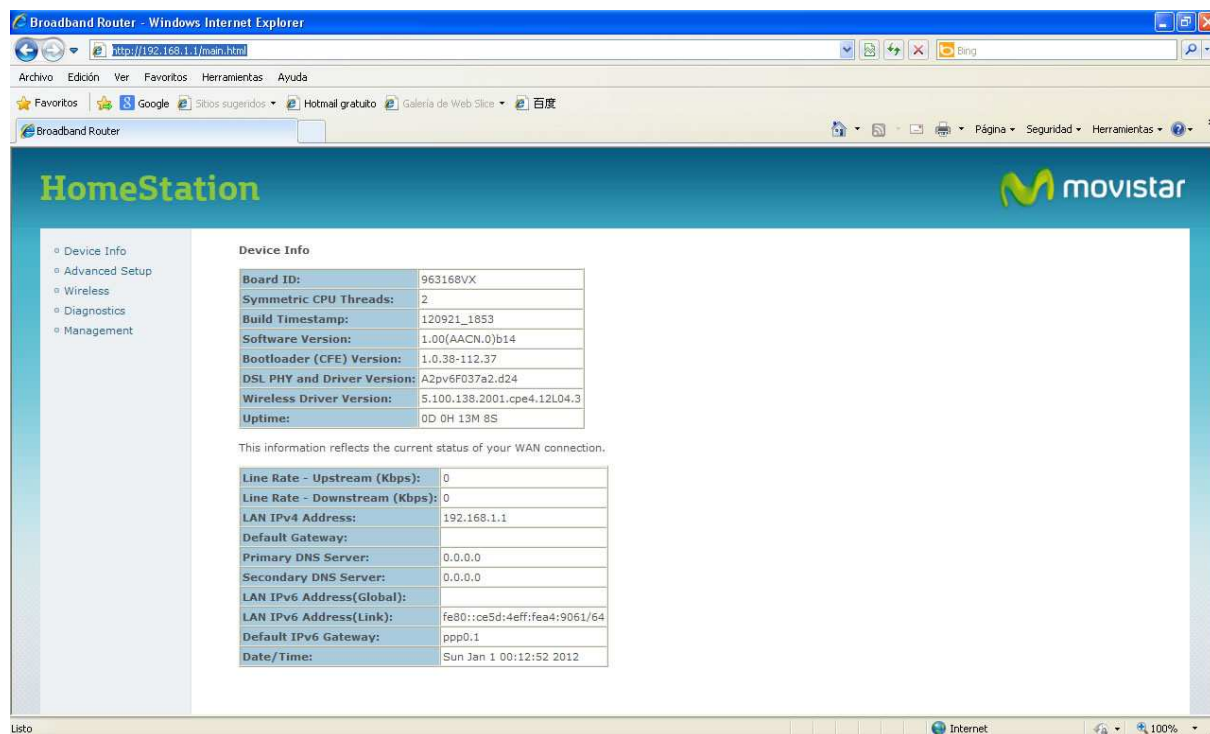**Figure 2-2: Web GUI main page**

In next section you will find how to make some basic operations using the web configurator embedded in this ADSL router. It will be necessary to use the options **Advanced Setup**, **Wireless and Management** that appear on the left side of the menu to complete operations such as:

- PASSWORD MODIFICATION
- CONFIGURING THE ROUTER
- PORT FORWARDING
- CONFIGURING THE WIRELESS LAN

It is not recommended to make any other different operation from these ones defined above using the web configuration.

3 BASIC OPERATIONS ON THE ROUTER

3.1 PASSWORD MODIFICATION

This is the first operation recommended to be made. Select:

Management -> Access Control -> Passwords and you will see next screen:

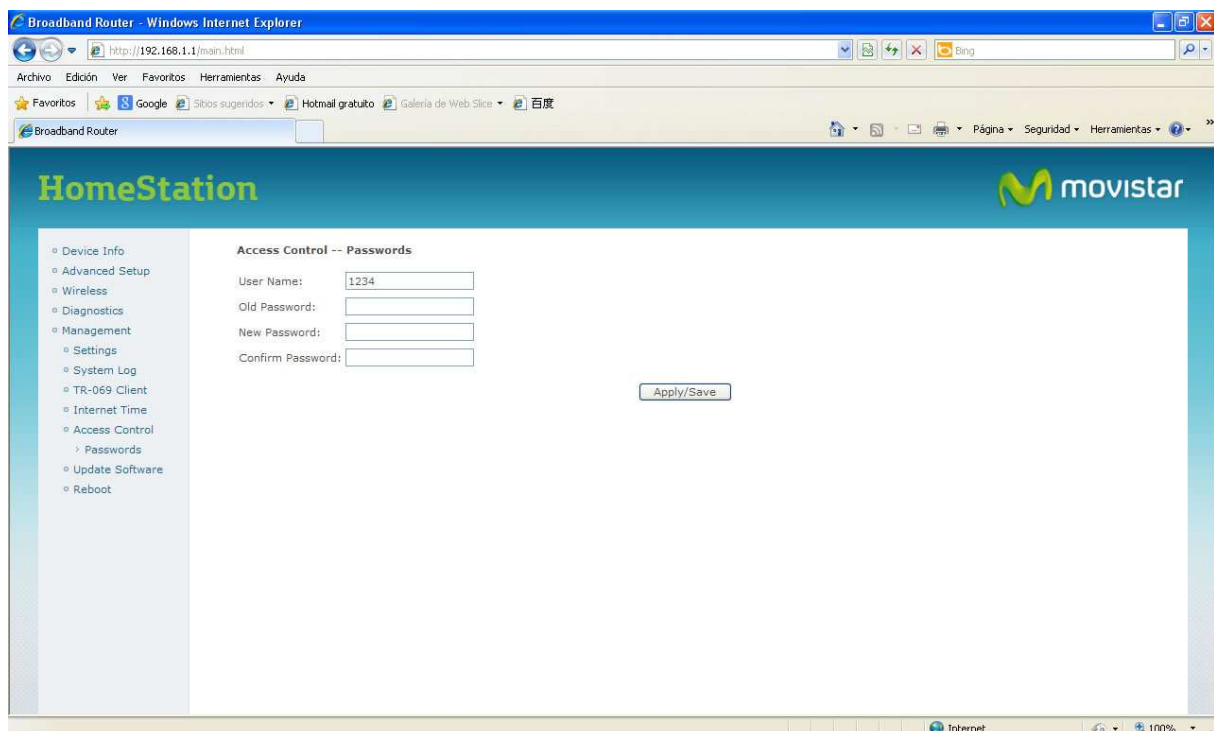


Figure 3-1: Password modification menu

Fill in the fields accordingly and keep in mind the key is sensitive to capital and non-capital letters:

- *User Name* : The username of the access account (1234)
- *Old Password*: The current password
- *New Password*: The new password
- *Confirm Password*: Retype the new password

Once filled these boxes, press *Apply/Save* button. If the operation is completed successfully, the web explorer will be disconnected and it will be necessary to introduce the new password to gain the access back to the router. In case you forget this new password, please refer to the *User's Guide* about how to restore factory default settings in your router.

3.2 CONFIGURING THE ROUTER

If you are going to connect only one PC to your router, a **monouser** configuration would be enough. In that case, it is recommended to install a firewall and an antivirus software updated and enabled in your PC due to it will be directly connected to the internet. On the other side, if you expected to connect different devices to your router, you must select the **multiuser** configuration. It is recommended to use a **multiuser** configuration even though when you're going to connect only one PC to the internet, due to the fact that it provides higher security and makes it possible to enjoy all the advanced features supported by the router.

Additionally to the **monouser** or **multiuser** configuration, you must also configure the IP address assignment mode for the VDSL2 router. There are two possibilities about this IP address assignment configuration for a broad band line.

- **Static** address assignment: a fixed IP address is assigned to the router for all connections.
- **Dynamic** address assignment: the IP address assigned is not always the same, the values provided are the PPPoE session username and password to be used to get the connection.

This information appears in the welcome note received by the user at home. They can also be obtained dialing to the phone number 900502010 from the phone line where the broad band line is installed .

NOTE: In all next explanations it is considered that the starting point is the factory default settings. If it were necessary, please refer to the VDSL2 router <i>User's Guide</i> to check how to restore factory default settings.

3.2.1 MULTIUSER CONFIGURATIONS

In both network address assignments, *dynamic* (factory default value in the router) and *static*, some configuration options are common. Initially, it is necessary to configure the router private network (LAN). Select: **Advanced Setup ->LAN** to display next screen where you will need to fill in the according values:

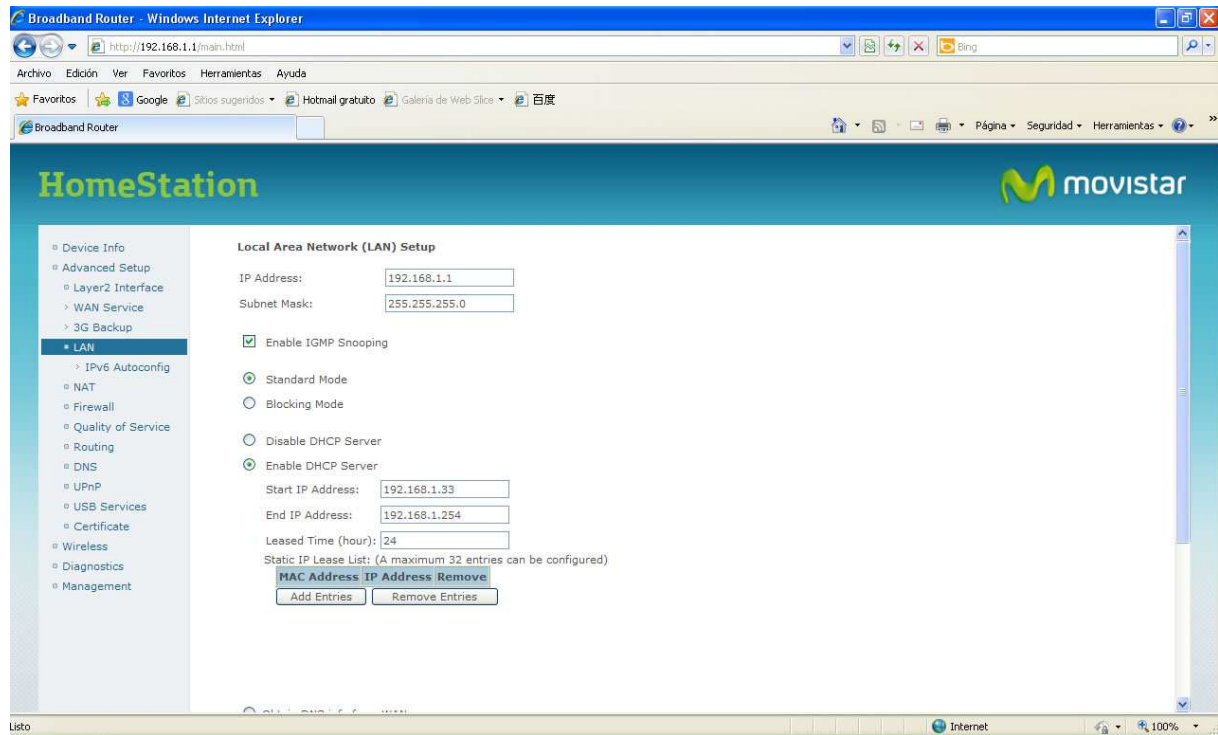


Figure 3-2: Private network address options configuration in multiuser mode

If you want, you can change in this screen the router IP address (*IP Address* and *IP Subnet Mask*) and the DHCP server settings (*Start IP Address*, *End IP Address*,...) according with the private network desired values. It is not recommended to modify any other parameters.

Once introduced previous values, press *Apply/Save* button and the router will be updated properly.

The WAN configuration options are the features required for the VDSL2 interface. Select: **Advanced Setup** -> **WAN** to display next screen:

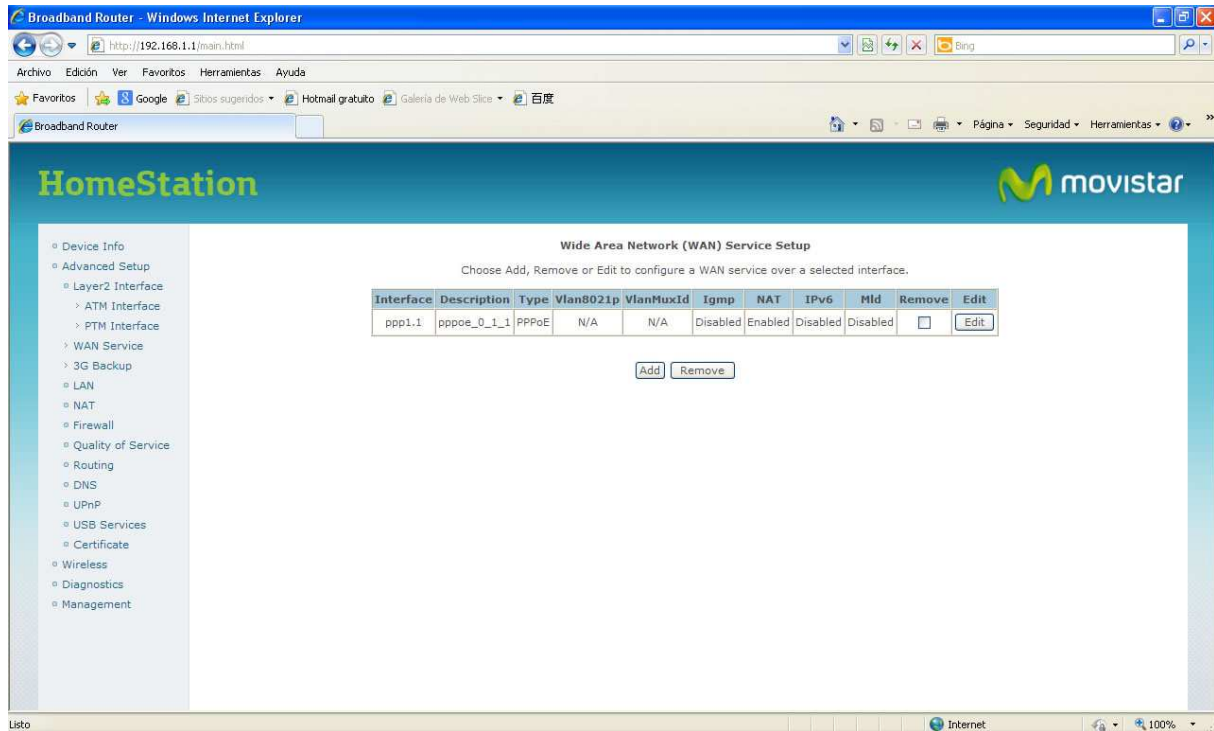


Figure 3-3: WAN configuration

MULTIUSER DYNAMIC (FACTORY DEFAULT OPTION)

Go to **Advanced Setup** → **WAN** and press the *Edit* icon associated to the existing WAN interface and you will obtain the following screens sequence, where appearing an example of configuration for this case. It will be necessary to configure the right values for the username and password parameters for the PPPoE client according with the broadband line. In next figures you can refer to the parameters already configured with the right values. It is recommended not to modify them. To move forward the next screen, press the *Next* button on each one.

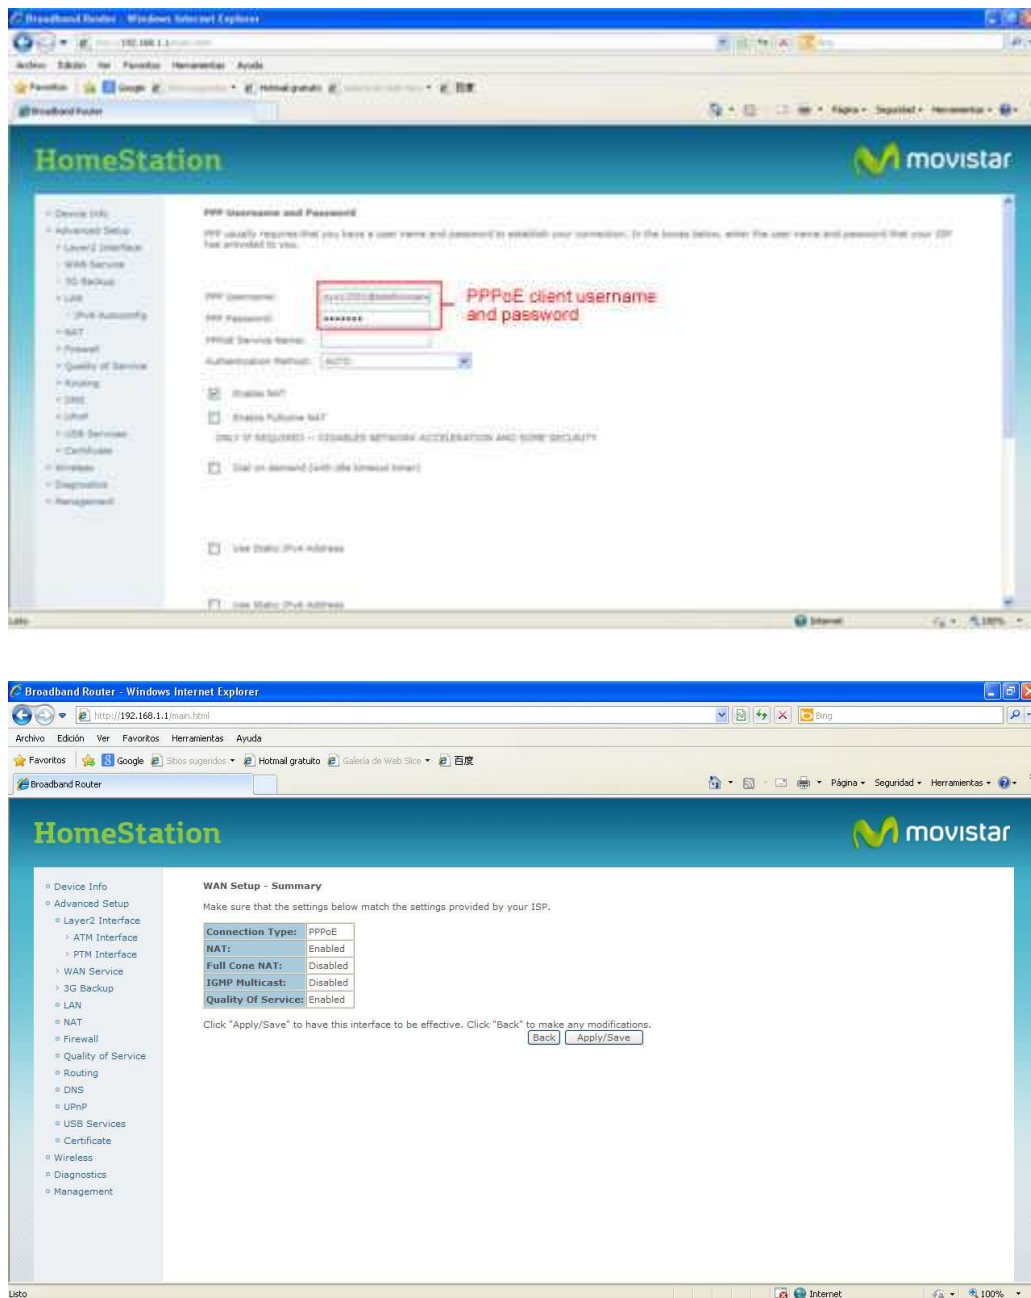


Figure 3-4: Screens sequence WAN configuration in multiuser dynamic mode

In the multiuser configurations, the NAT feature must be enabled, as it can be appreciated in the summary table displayed in previous screen (NAT : Enabled).

Once completed these previous fields, press *Apply/Save* button to make the router saves the changes properly.

MULTIUSER STATIC

Go to **Advanced Setup** → **WAN** and select the *Remove* checkbox, pressing next the bottom *Remove* to delete the existing WAN interface.

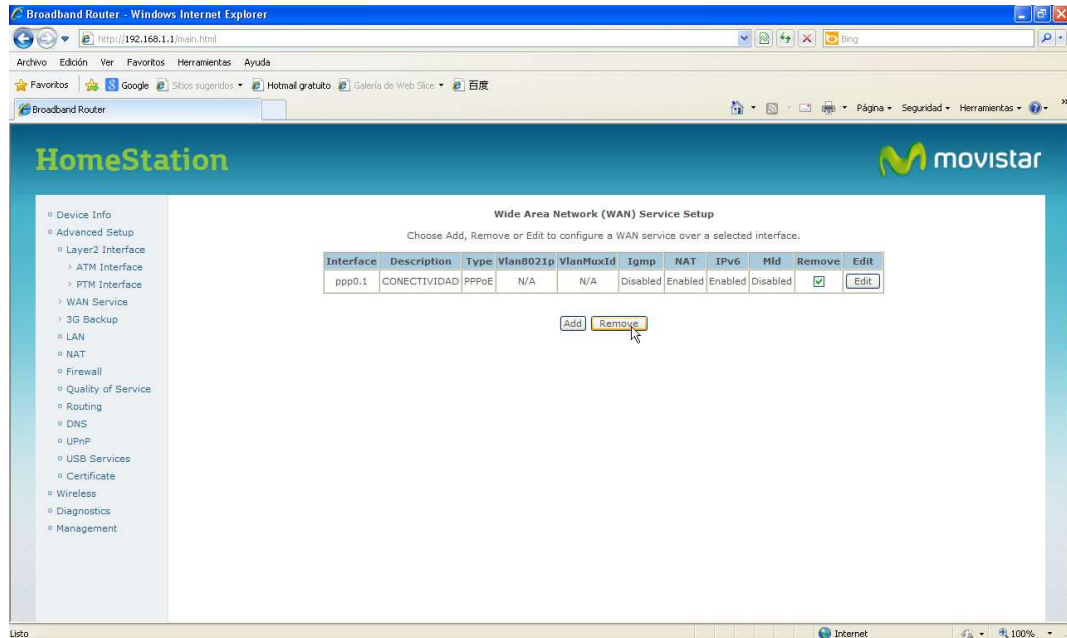


Figure 3-5: Remove WAN interface

After that, press on the *Add* button in the same screen, to add a new WAN connection and you will obtain the following sequence of screens where an example appears configured for this case. It will be necessary to configure here the right value of the public IP address received for the broadband line. In the next screenshots you can find the rest of parameters already configured with the right values. It is recommended not changing them. To move forward to next screens, press the *Next* button on each one.

Broadband Router - Windows Internet Explorer

http://192.168.1.1/main.html

Archivo Edición Ver Favoritos Herramientas Ayuda

Favoritos Google Sitios sugeridos Hotmail gratuito Galería de Web Slice 百度

Broadband Router

HomeStation

movistar

- Device Info
- Advanced Setup
 - Layer2 Interface
 - ATM Interface
 - PTM Interface
 - WAN Service
 - 3G Backup
- LAN
- NAT
- Firewall
- Quality of Service
- Routing
- DNS
- UPnP
- USB Services
- Certificate
- Wireless
- Diagnostics
- Management

WAN Service Configuration

Select WAN service type:

☐ PPP over Ethernet (PPPoE)

☒ IP over Ethernet

☐ Bridging

Enter Service Description:

For tagged service, enter valid 802.1P Priority and 802.1Q VLAN ID.
For untagged service, set -1 to both 802.1P Priority and 802.1Q VLAN ID.

Enter 802.1P Priority [0-7]:

Enter 802.1Q VLAN ID [0-4094]:

Network Protocol Selection:(IPv6 Only not support)

☒ IPv4 Only

Listo

Internet 100%

Broadband Router - Windows Internet Explorer

http://192.168.1.1/main.html

Archivo Edición Ver Favoritos Herramientas Ayuda

Favoritos Google Sitios sugeridos Hotmail gratuito Galería de Web Slice 百度

Broadband Router

HomeStation

movistar

- Device Info
- Advanced Setup
 - Layer2 Interface
 - ATM Interface
 - PTM Interface
 - WAN Service
 - 3G Backup
- LAN
- NAT
- Firewall
- Quality of Service
- Routing
- DNS
- UPnP
- USB Services
- Certificate
- Wireless
- Diagnostics
- Management

WAN IP Settings

Enter information provided to you by your ISP to configure the WAN IP settings.
Note: If "Obtain an IP address automatically" is chosen, DHCP will be enabled for PUC in IPv4 mode.
If "Use the following Static IP address" is chosen, enter the WAN IP address, subnet mask and interface gateway.

☐ Obtain an IP address automatically

Option 60 Vendor ID:

Option 61 SAIID: (8 hexadecimal digits)

Option 61 DUID: (hexadecimal digit)

Option 129: ☒ Disable ☐ Enable

☒ Use the following Static IP address:

WAN IP Address:



WAN Subnet Mask:

WAN gateway IP Address:

Public IP address, subnet mask and gateway address

Listo

Internet 100%

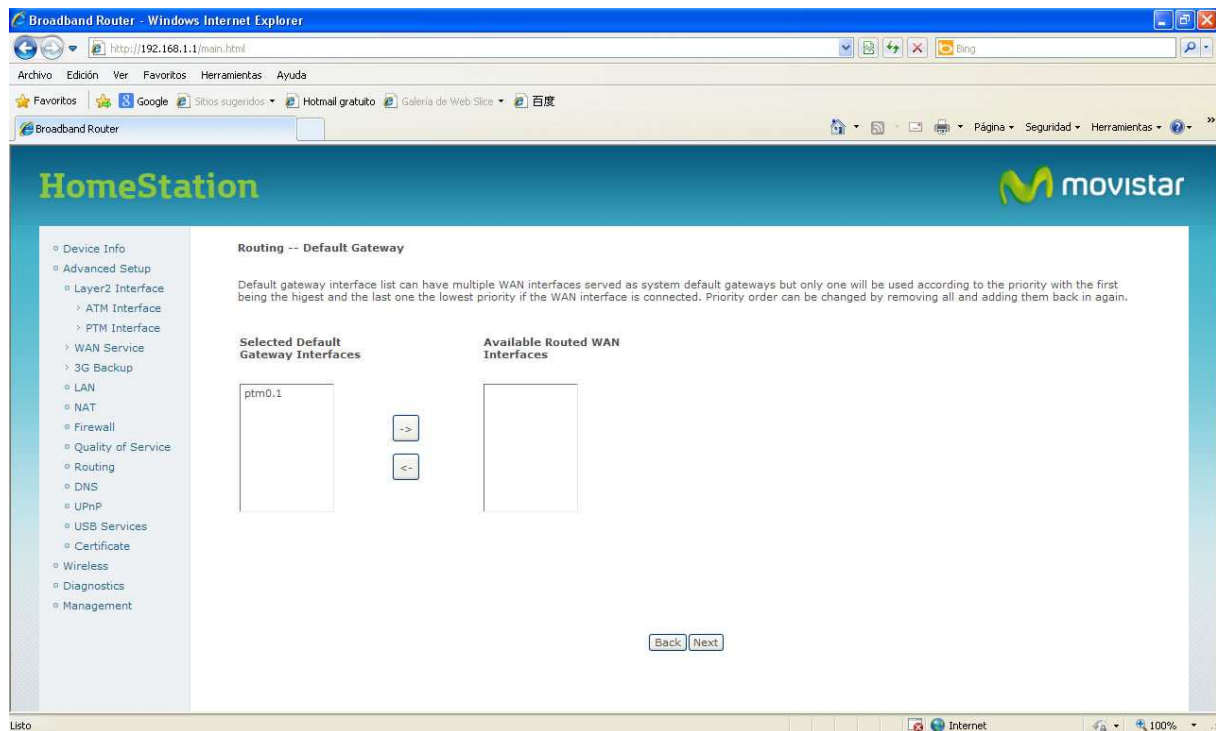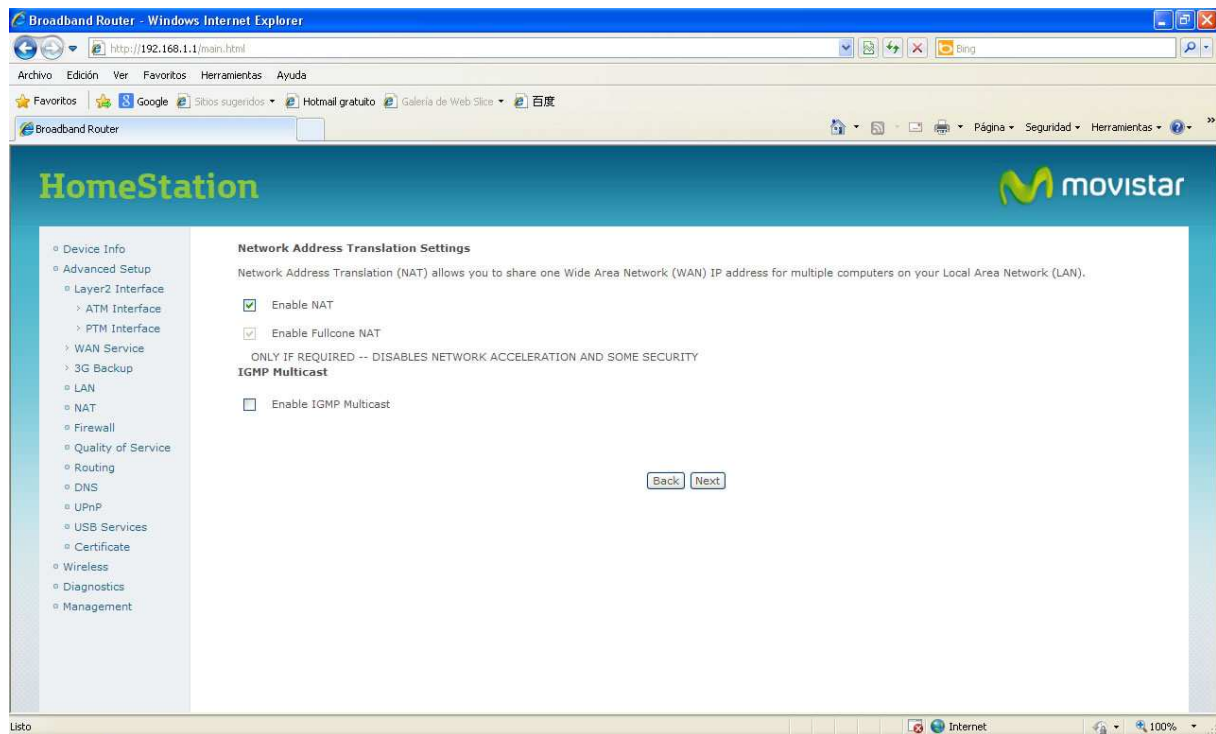

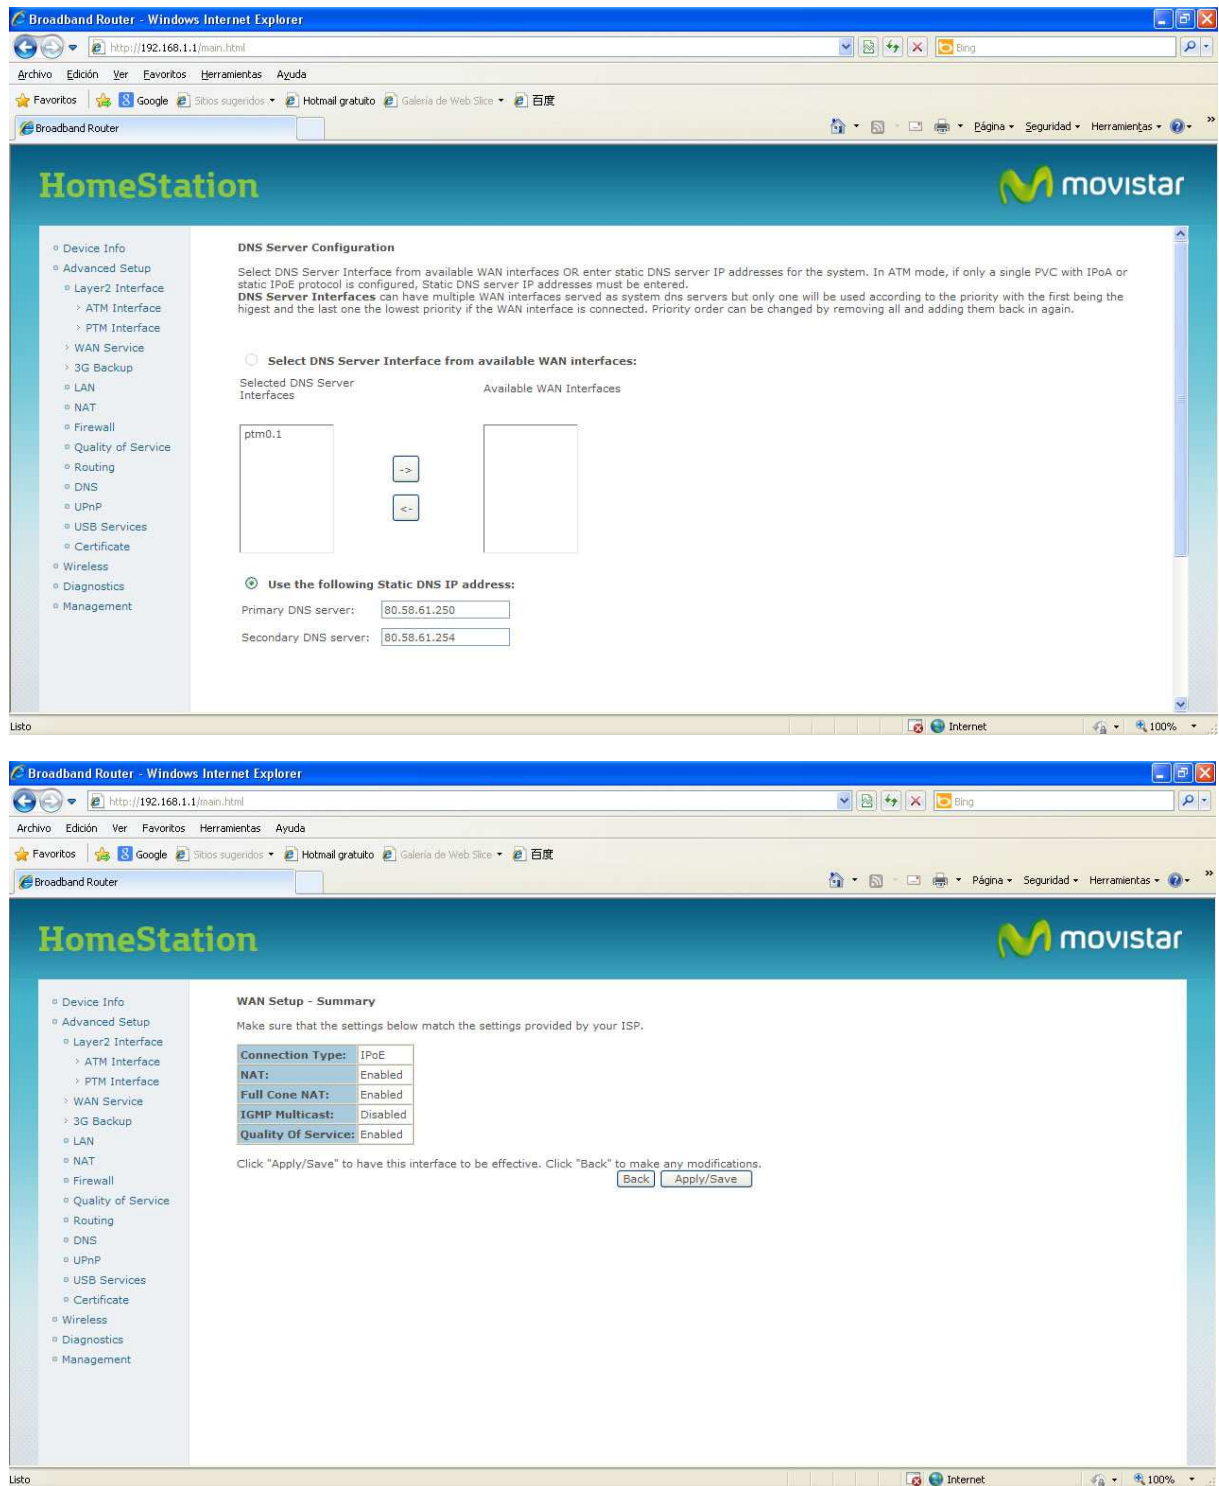


Figure 3-6: Screens sequence WAN configuration in multiuser static mode

In the multiuser configurations, the NAT feature must be enabled, as it can be appreciated in the summary table displayed in previous screen (NAT : Enabled).

Once completed these previous fields, press *Apply/Save* button to make the router saves the changes properly.

3.2.2 MONOUSER CONFIGURATIONS

These are not highly recommended settings for this router due to the advanced features supported by this device cannot be used. In this case, the PC is the device directly connected to the internet, where the NAT feature in the router is disabled. It is recommended to adopt some safety applications to avoid undesired threats or intrusions in the PC.

MONOUSER DYNAMIC

In this case, you **will need to install a PPPoE client in the PC**. If you are using Windows 2000, you can use the client provided in the package or the one supported by the own OS in Windows XP, Vista and 7. If you are using a different operating system, please refer to the help information in your OS to see how to install and use a PPPoE client. If you cannot have this PPPoE client in your operating system, you won't be able to work under this mode.

In the configuration process of the PPPoE client installed on the PC you will need to introduce username and password to establish the connection. Additionally it will be required both PC and router to have IP visibility. To do that, both devices must be configured in the same IP private network range. As we take factory default settings as starting point, then the router will have the IP address 192.168.1.1 with network mask 255.255.255.0 and the PC will receive the IP settings through DHCP. If it were necessary, refer to the *CPE User's Guide* to see how to restore factory default settings in your router.

It is not mandatory, but you can configure the DHCP server settings with the values referred in the **Figure 3-2: Private network address configuration options in multiuser mode**

Go to: **Advanced Setup** -> **WAN** and select the *Remove* checkbox, pressing next the bottom *Remove* to delete the existing WAN interface, as shown in above figure 3-5.

After that, press on the *Add* bottom in the same screen, to add a new WAN connection and you will obtain the following sequence of screens where an example appears configured for this case. It will be necessary to configure here the right value of the public IP address received for the broadband line. In the next screenshots you can find the rest of parameters already configured with the right values. It is recommended not changing them. To move forward to next screens, press the *Next* bottom on each page.

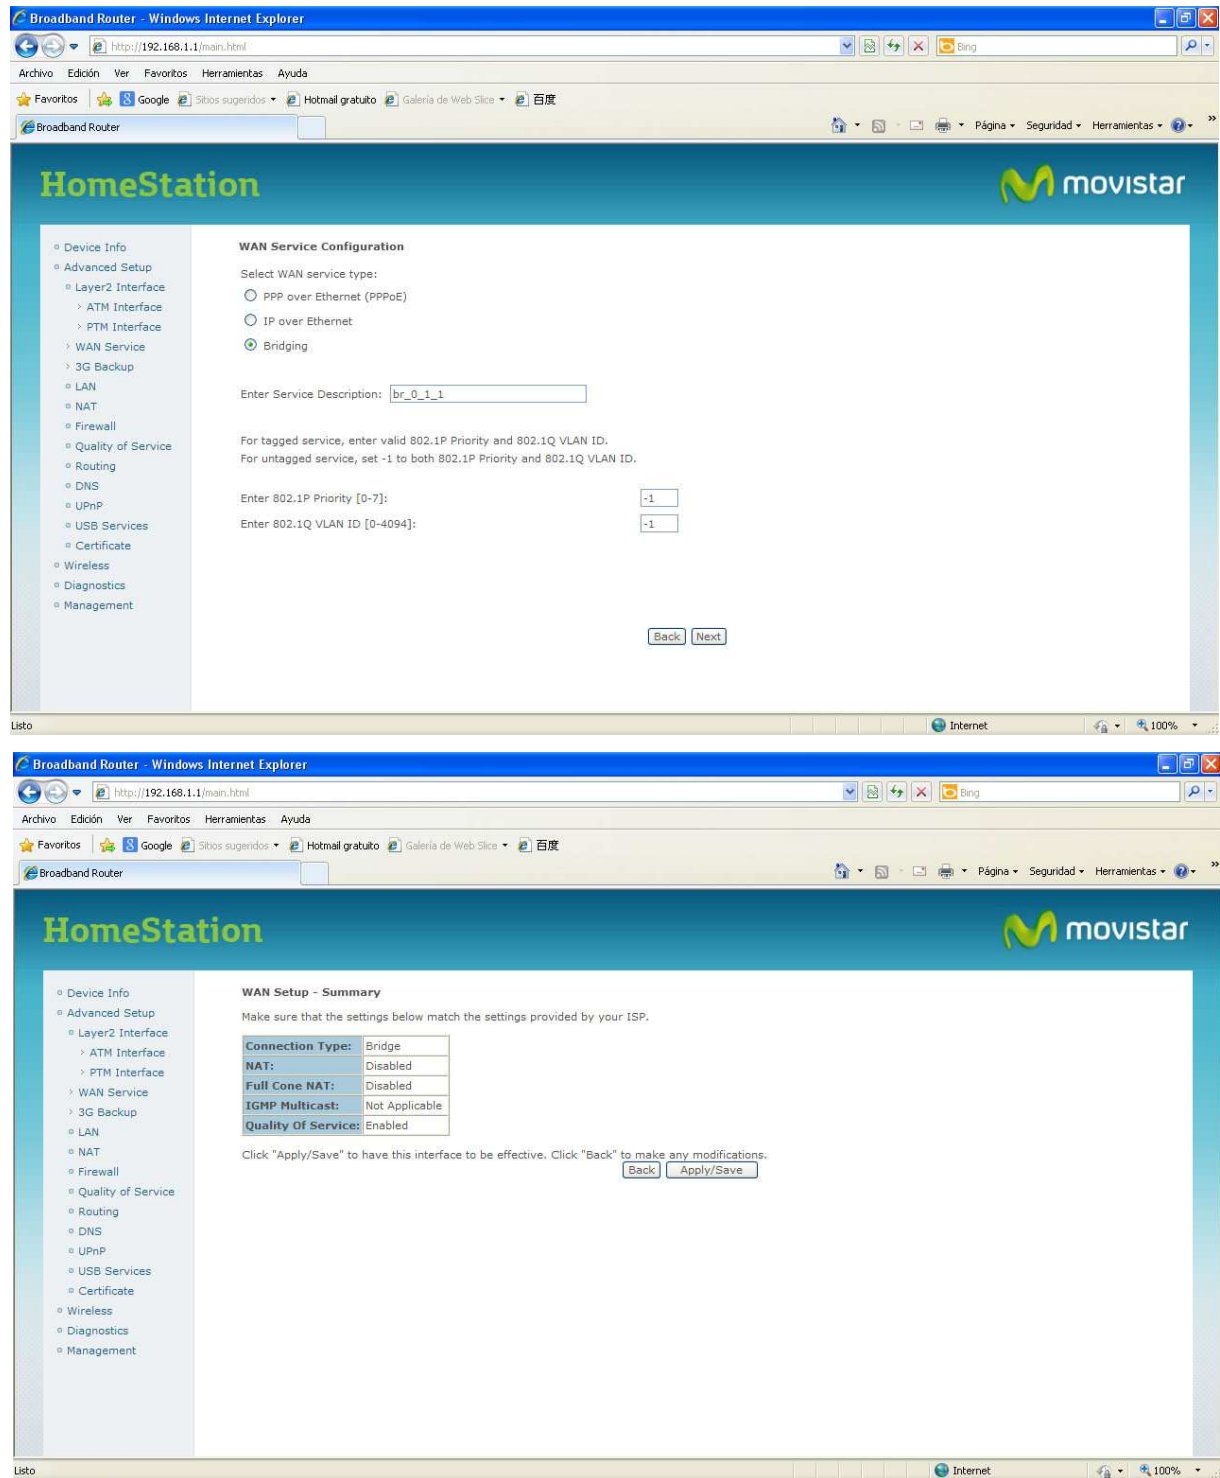


Figure 3-7: Screens sequence WAN configuration in monouser dynamic mode

Once completed these previous fields, press *Apply/Save* button to make the router saves the changes properly

MONOUSER STATIC

First of all, it will be required to assign an IP address to the router. To obtain this address it is necessary to perform a logical AND operation between the public IP address and the network mask (these values appear in the information received from Telefonica) and add 1. For example, let's suppose your public IP address is X.X.X.135 and the network mask is 255.255.255.192. Go to: *Advanced Setup* -> *LAN* to display next screen, where you can see one example showing how to fill in these fields. The rest of the parameters must be configured with the right values according with next figure. It is recommended not to change them.

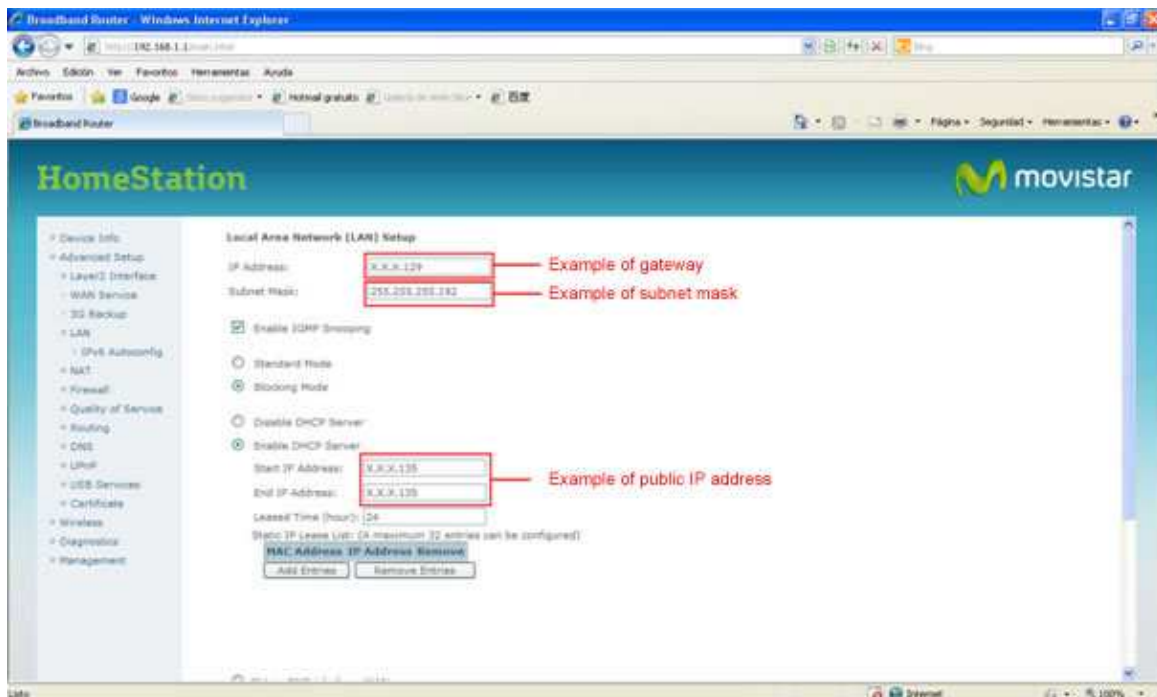


Figure 3-8: Network options configuration in monouser static mode

Once completed these previous fields, press *Apply/Save* and the router will be configured as expected.



The router is configured to make the PC when asking for the IP address via DHCP, it will receive the public IP address. At this moment, you will lose the IP connectivity between your PC and the router and it will not be recovered till the PC can renew the IP address. Refer the help information in your operating system to check how to do it. In this moment you will recover the connectivity back with the router to continue the configuration process.

Now go to *Advanced Setup* -> *WAN* and select the *Remove* checkbox, pressing next the bottom *Remove* to delete the existing WAN interface, as shown in figure 3-5 above.



After that, press on the *Add* bottom in the same screen, to add a new WAN connection and you will obtain the following sequence of screens where an example appears configured for this case. It will be necessary to configure here the right value of the public IP address

received for the broadband line. In the next screenshots you can find the rest of parameters already configured with the right values. It is recommended not changing them. To move forward to next screens, press the *Next* bottom on each page.

It is only required a management IP address (shown in the information received). In this example, it will be used the 10.0.0.5, as can be shown in next screen.

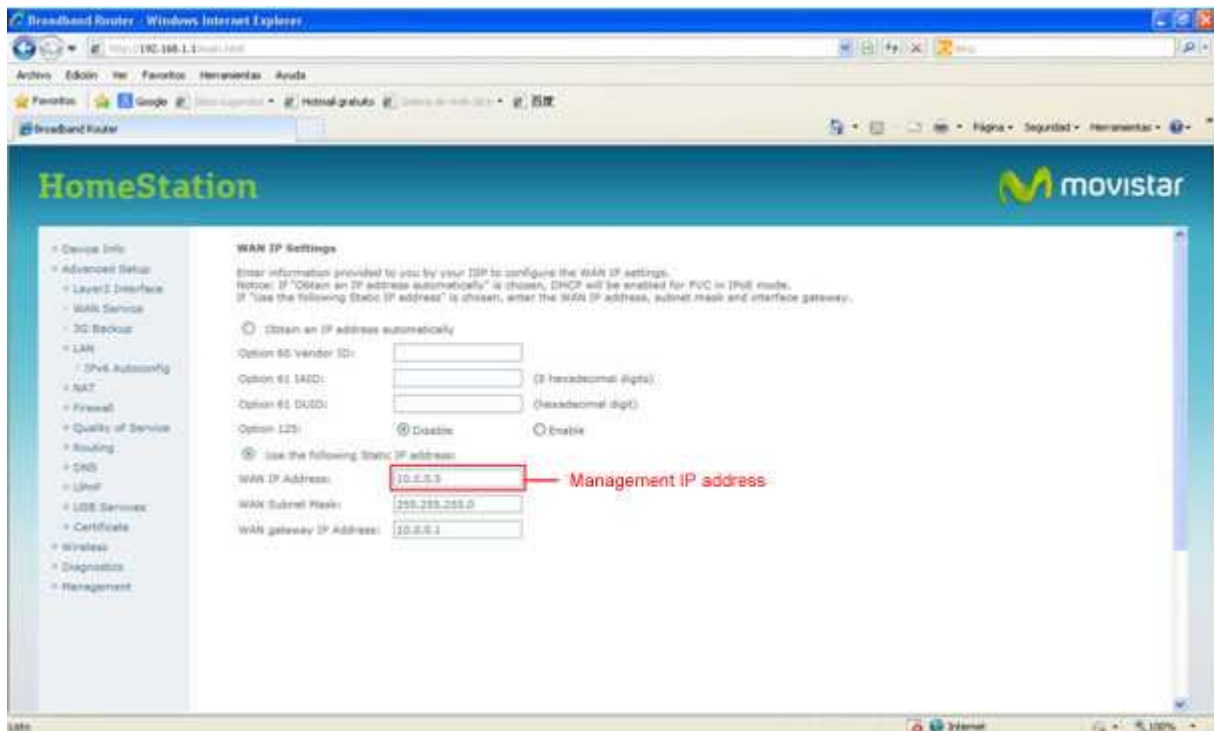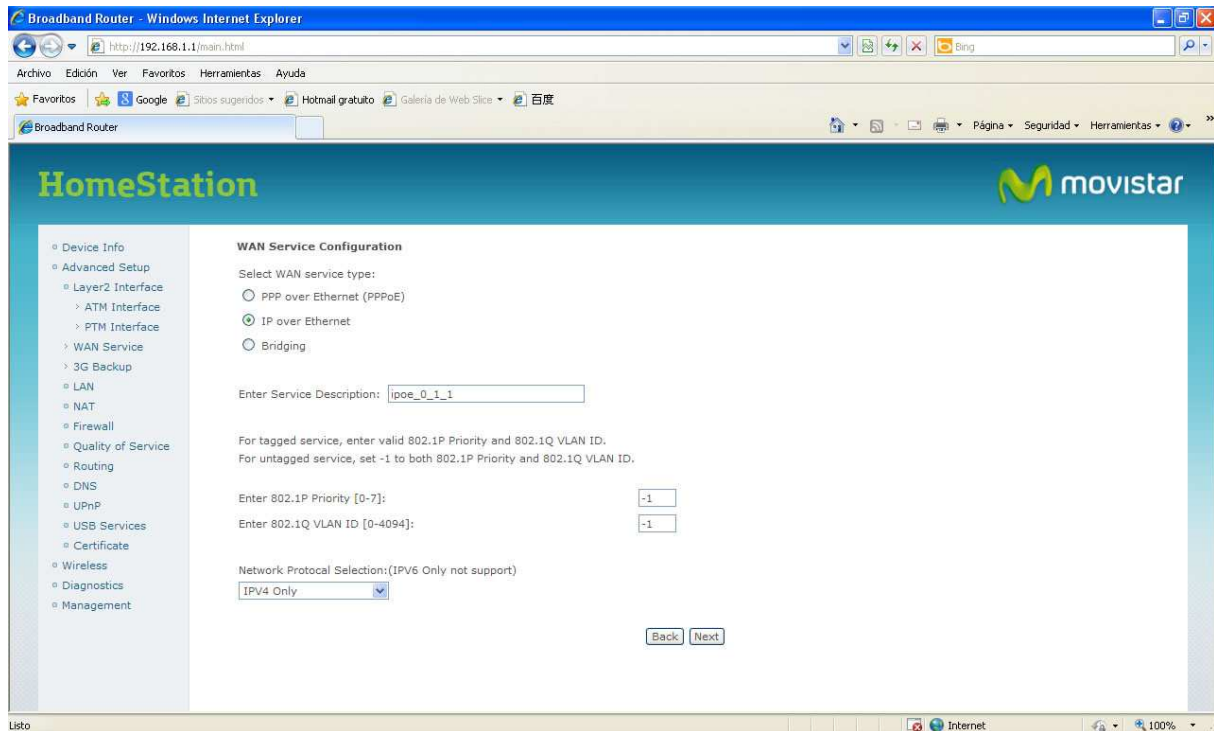

BASIC OPERATIONS ON THE ROUTER

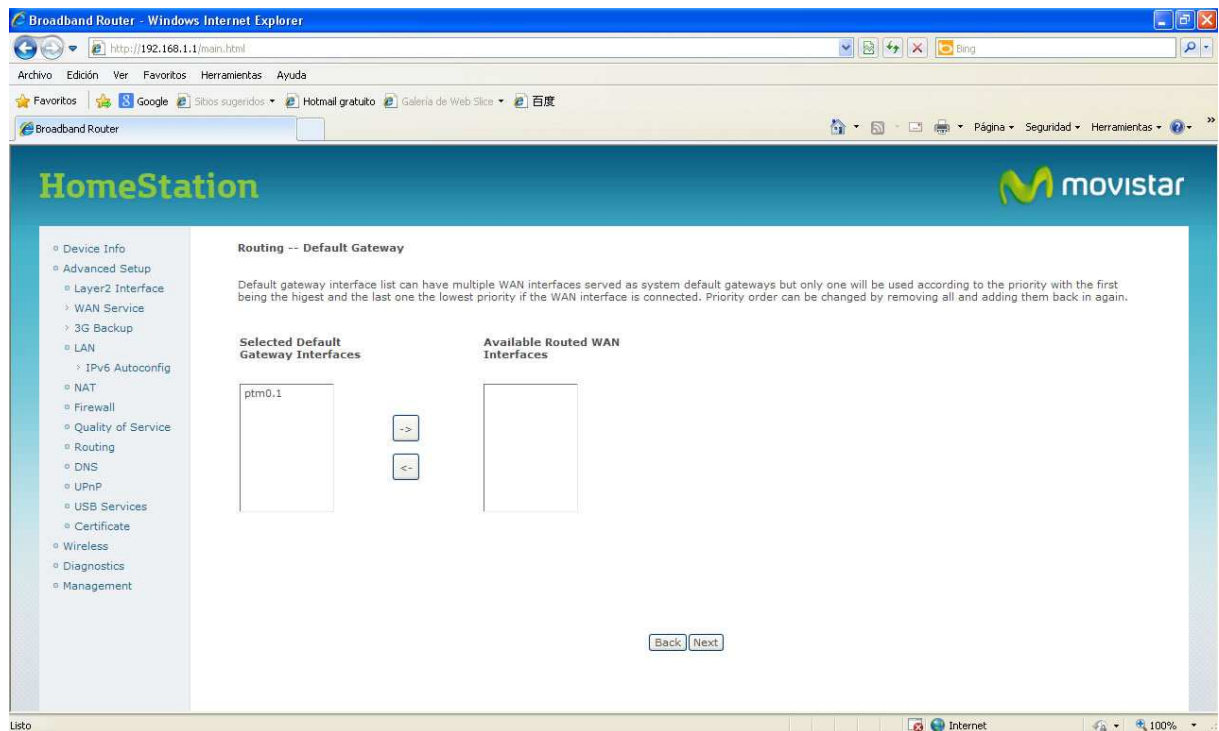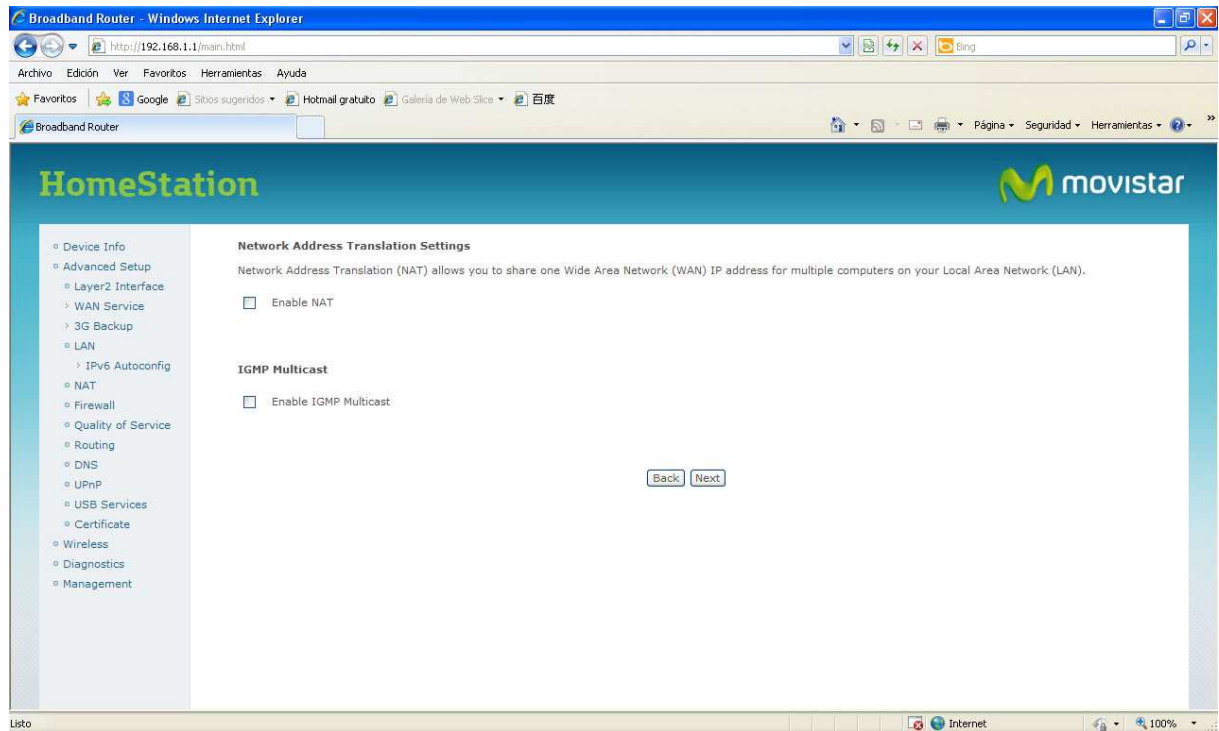

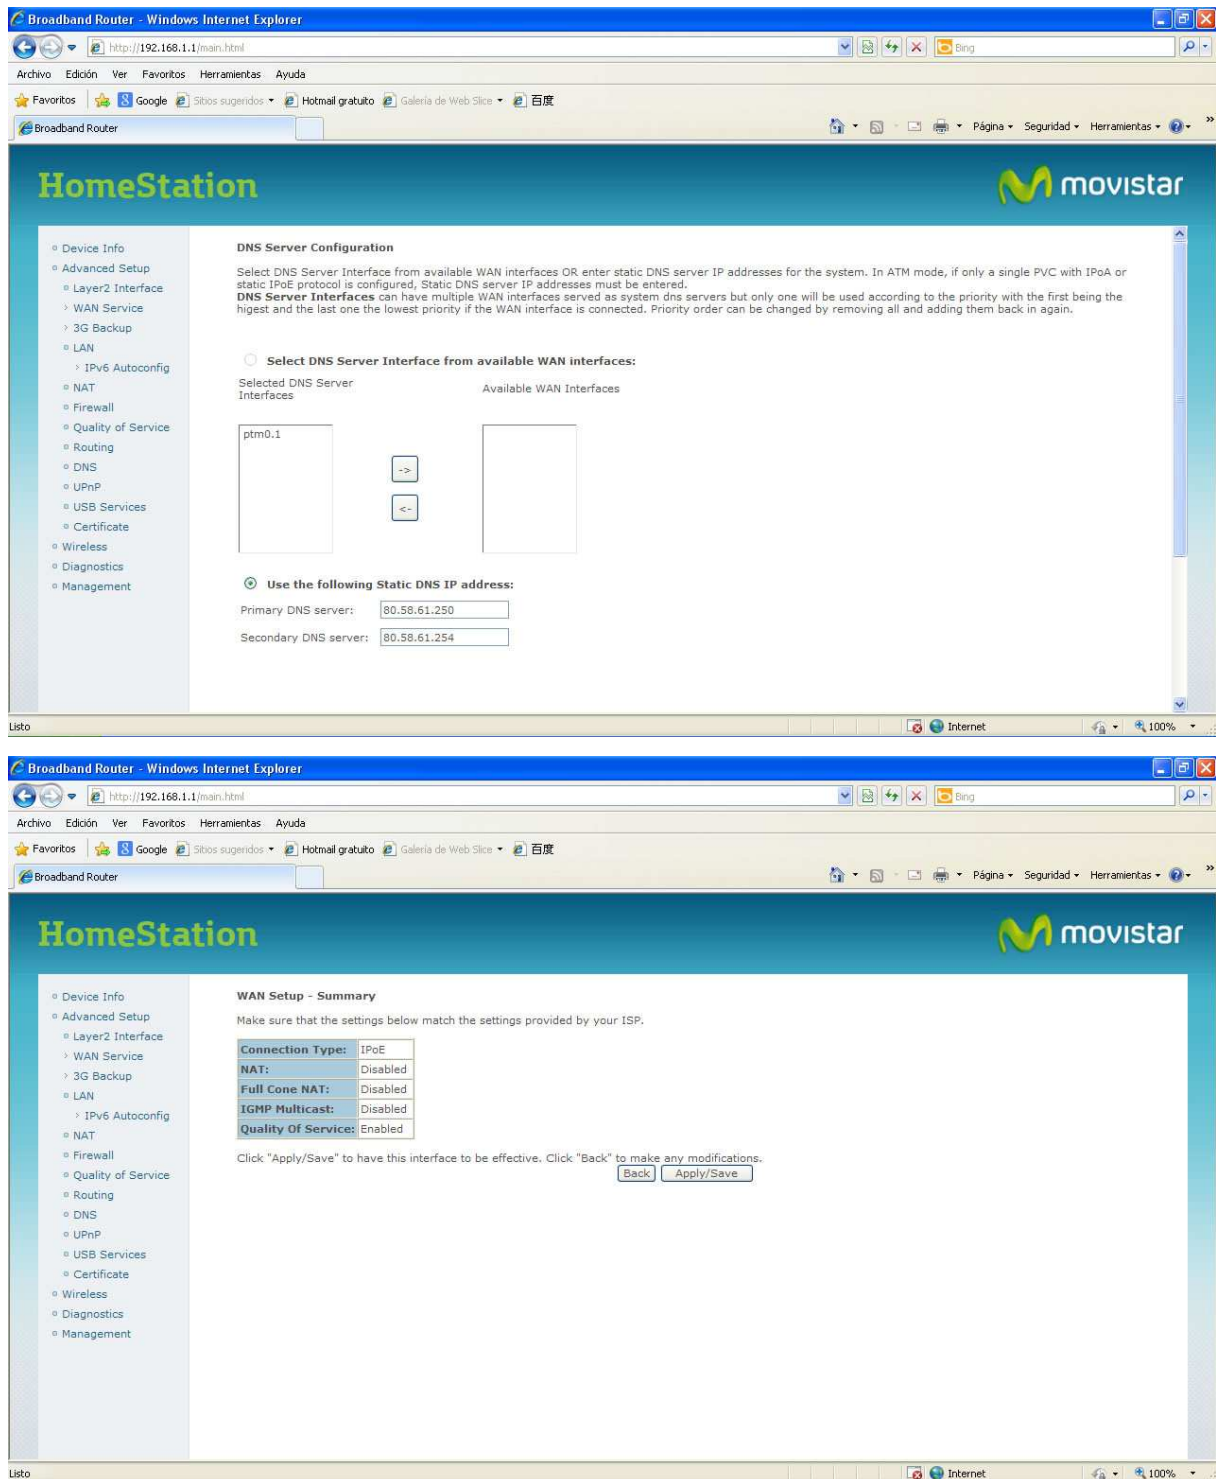


Figure 3-9: Screens sequence WAN configuration in monouser static mode

Once completed these previous fields, press *Apply/Save* in the last screen of the sequence and the router will be configured as expected.

3.3 PORT FORWARDING

If your router is configured in **multiuser** mode, the NAT feature will be enabled. This feature implies that you could need to forward some ports to use some applications (online gaming, videoconference, etc.).

Go to: **Advanced Setup -> NAT -> Virtual Server** to display next screen:

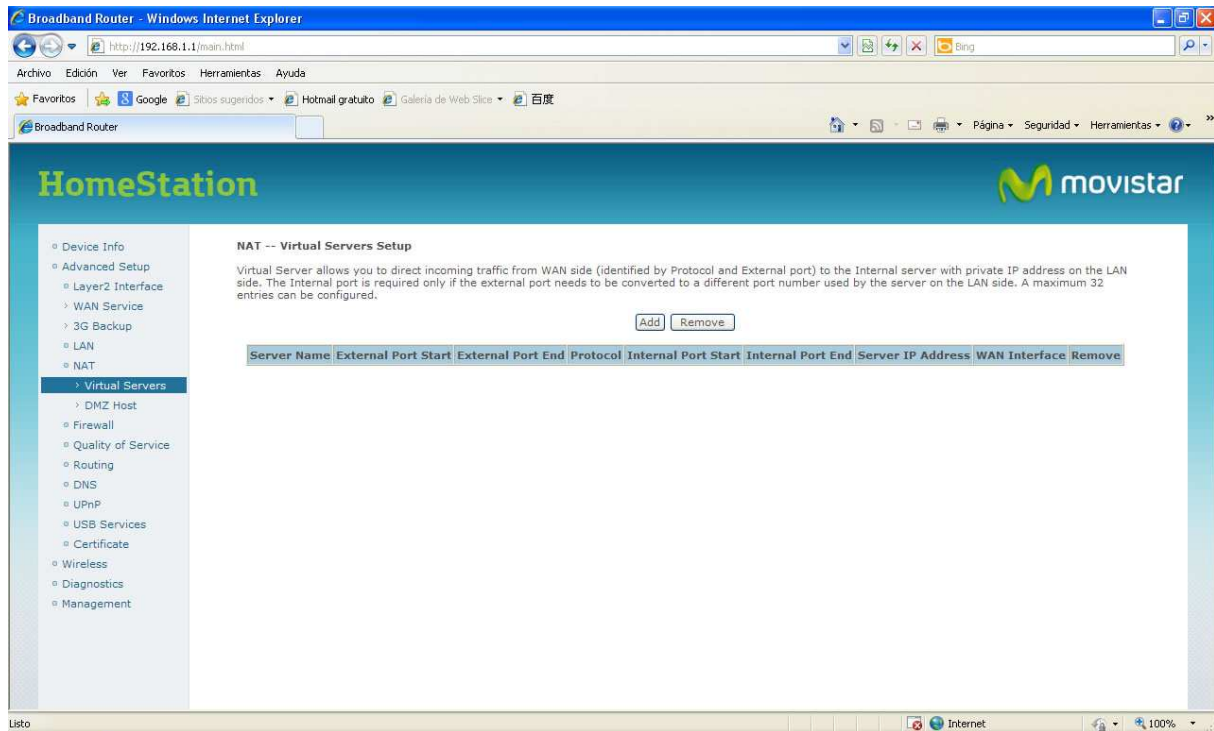


Figure 3-10: Port Forwarding-1

In the screen above press the bottom Add and you will see the following screen where it is displayed an example with the mapping of the port 21 (ftp) to a PC in the private network with IP address 192.168.1.33:

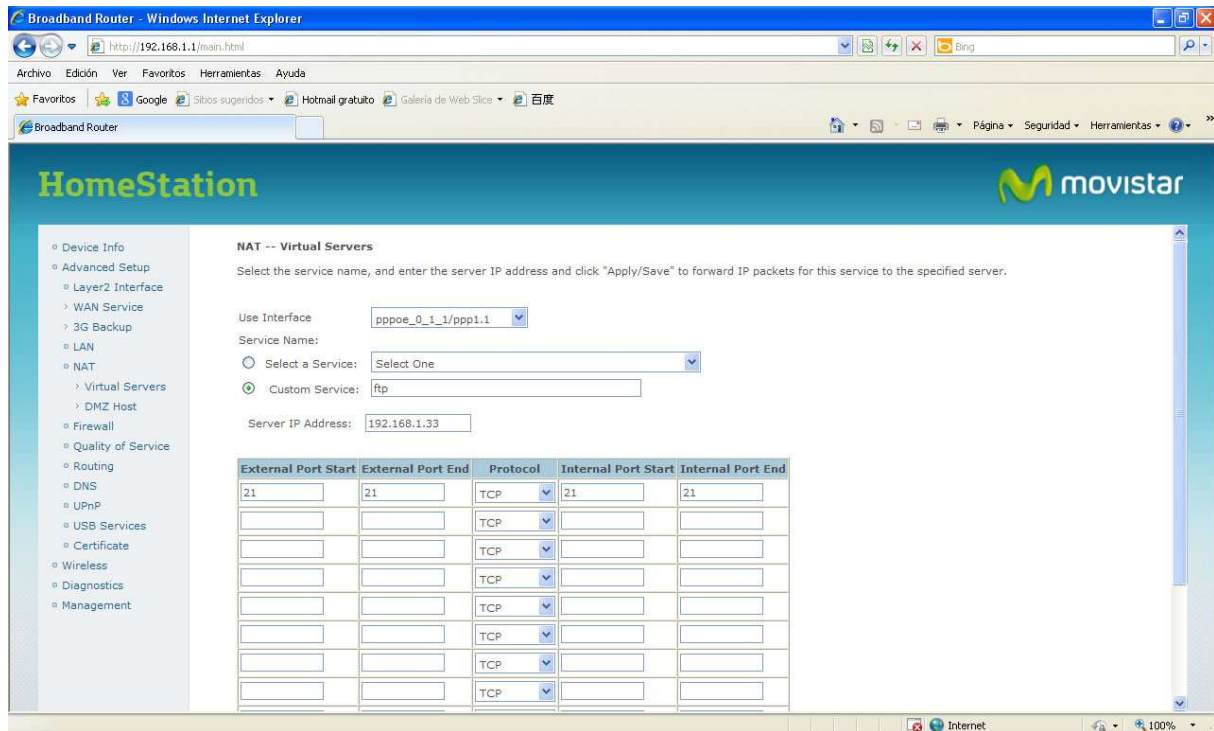


Figure 3-11: Port Forwarding-2

Press *Apply/Save* button and the rule will be stored in the router. Add as many ports as you need. For safety reasons it is recommended to close all ports not in use, this is, removing them from the above table.

3.4 CONFIGURING THE WIRELESS LAN

If you want to configure the ADSL router Wireless LAN interface, keep in mind to use similar settings in the wireless LAN clients to be associated to the router.

If you need further information about the wireless networks, please refer to the “Tutorial sobre redes WiFi” available in the www.telefonicaonline.com/zonawifi webpage.

Basically it will be necessary to configure following parameters:

- Radio channel to be used by the access point.
- The network identifier (SSID), it will be the name for identifying the wireless LAN network.
- The encryption type. Basically there are two main encryption types to provide some privacy to the communications through the wireless interface:
 - WEP (Wired Equivalent Privacy) for Wi-Fi IEEE 802.11b and 802.11g networks.
 - WPA-PSK (Wi-Fi Protected Access / Phase Shift Keying).

Movistar recommends, for safety reasons, to enable always some encryption in the wireless network. If the network has no 802.11b clients, it is suggested to use WPA encryption. But in the case some 802.11b client could be associated to the router, then it is recommended to use WEP 128-bits encryption.

NOTE: The VDSL2 router IP address will depend on the configuration mode (multiuser/monouser , static/dynamic). In this case, we will take, as reference, the 192.168.1.1.

To access the wireless LAN settings, go to *Wireless* section:

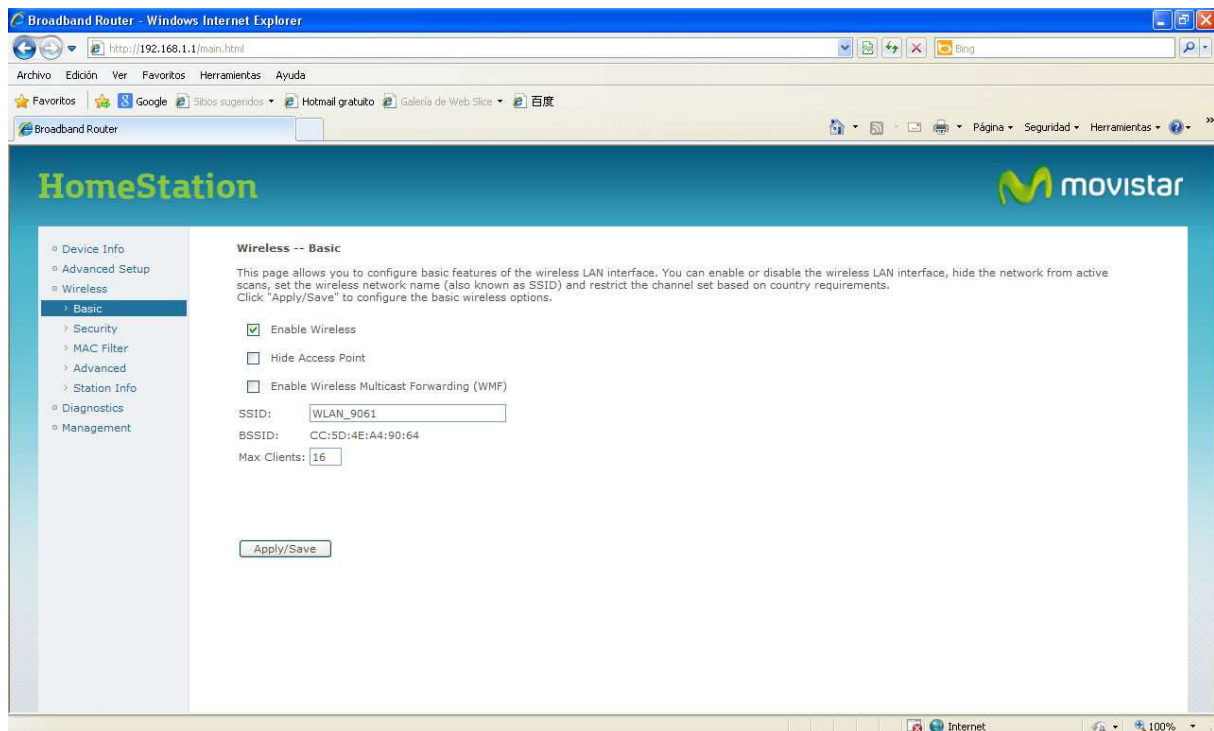


Figure 3-12: Wireless LAN options configuration

In the previous screen, it is possible to enable/disable the wireless interface of your Home Station VDSL2, as far as configure the network identifier (SSID). In the section *Wireless* → *Advanced*, some additional parameters such as the radio channel to be used.

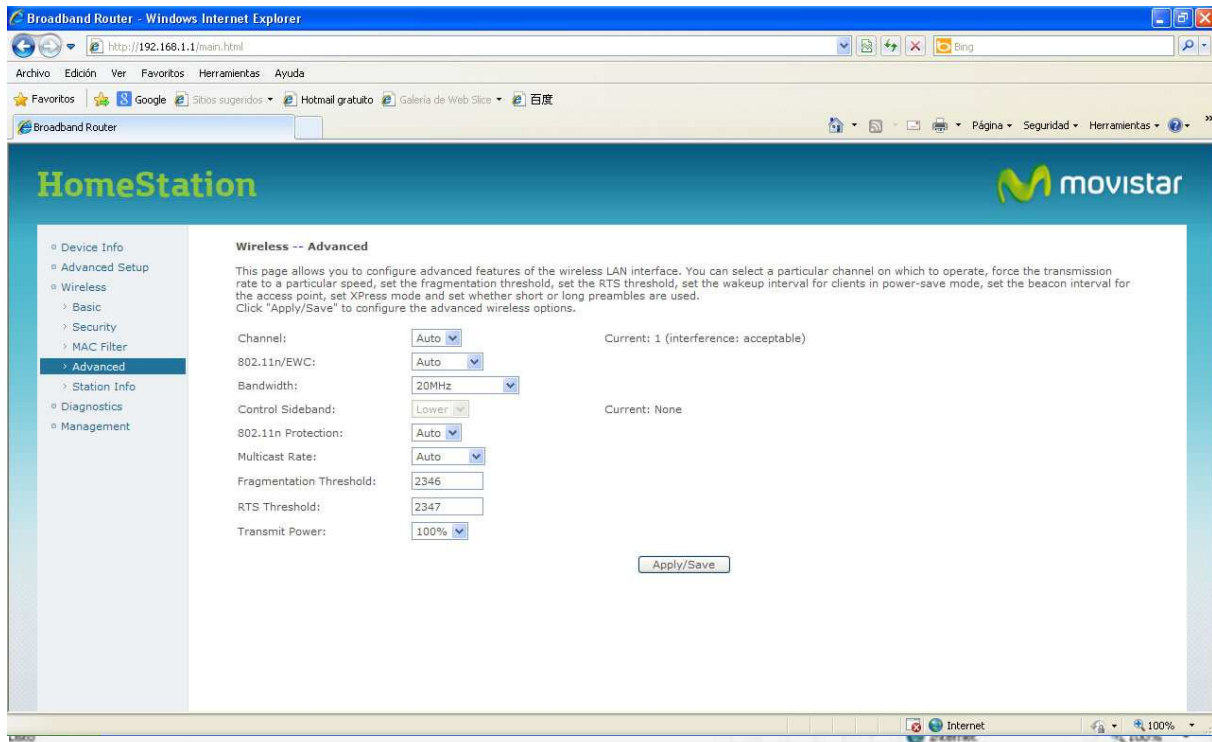


Figure 3-13: Additional parameters of the WLAN interface

WEP ENCRYPTION

In **Wireless -> Security** section, it will be possible to configure the WEP encryption parameters, choosing the value *Open* for the parameter “Network Authentication” and the value *Enabled* for the “WEP Encryption” parameter.

We strongly recommend you to avoid the No Security option.

As a reference, it has been selected a WEP encryption with 128-bits with encryption key **1234567890123**. Keep on mind when typing the encryption key, it must have a length of 13 ASCII characters and it will differentiate between capital and non-capital letters.

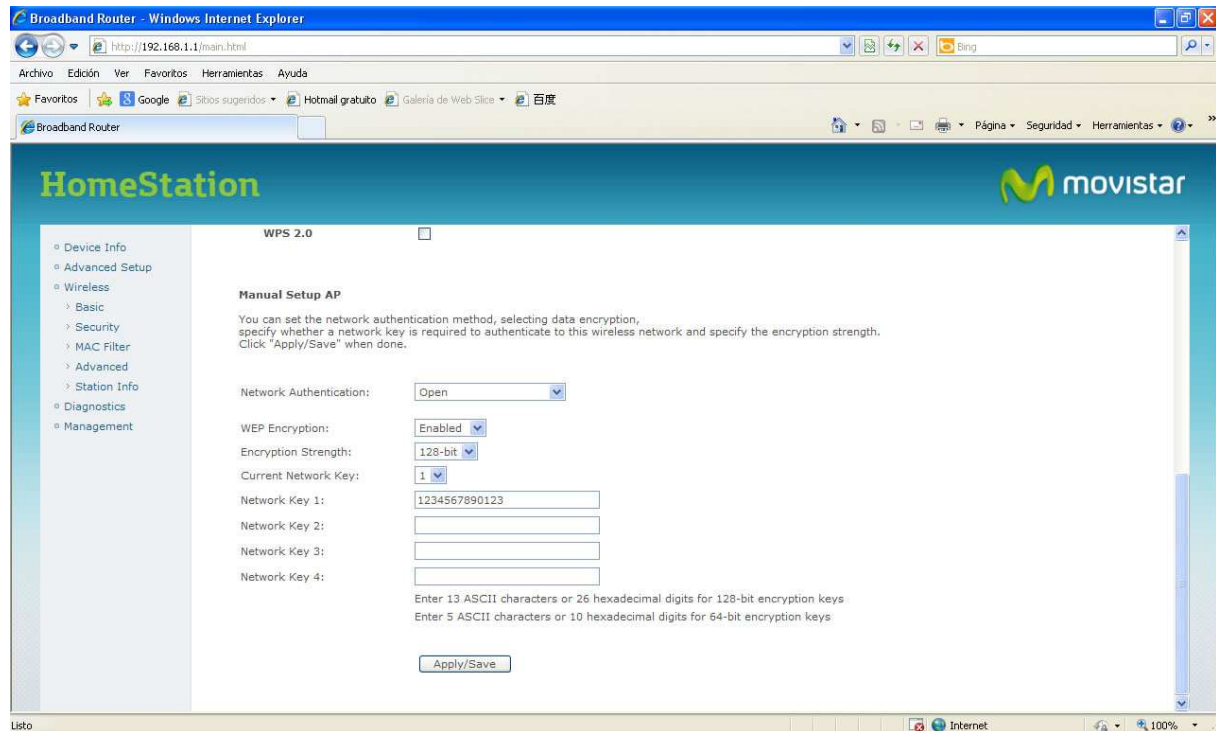


Figure 3-14: Wireless LAN enabled with WEP encryption

Once completed previous fields, press *Apply/Save* and the router will be configured as expected.

WPA ENCRYPTION

In **Wireless** -> **Security** option, select the WPA-PSK modality in the “Network Authentication” option in previous figure (see figure 3-14).

In the figure 3-15 it appears an example based on this WPA encryption with the key **aaaaaaaaaaaaaaaaaaaaaaaaa**. The WPA key must have a minimum length of 8 characters, although for safety reasons it is recommended to have at least 20 characters. This key will differentiate between capital and non-capital letters.

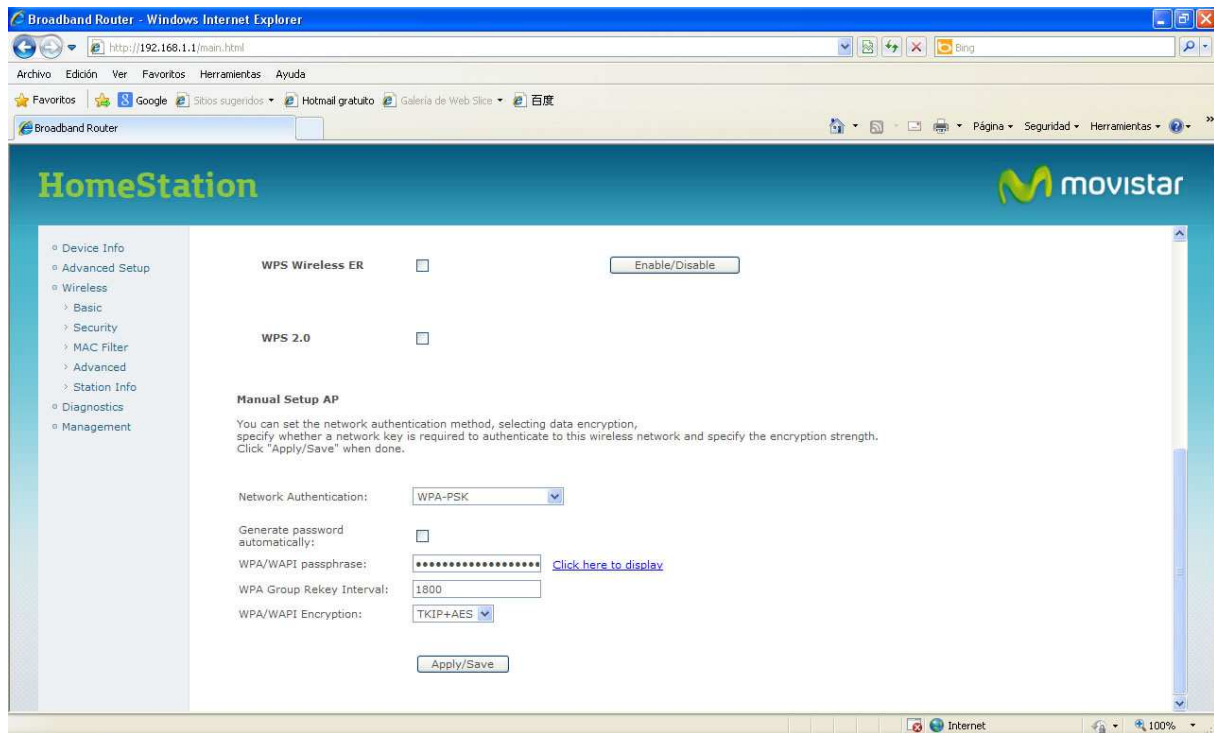


Figure 3-15: WPA encryption settings

Once introduced previous parameters, press *Apply/Save* and the router will be configured as expected.

3.5 OTHER OPERATIONS


Within this section, the next operation is included:

FIRMWARE UPGRADE

This is a **critical** operation which can make your router useless, so you must act carefully and use appropriate firmware versions. **It is a must to use OFFICIAL FIRMWARE releases approved by Movistar for this model. In other case the guarantee period for this device will be cancelled.**

Before starting with this firmware upgrade please **REMIN**D to disconnect the ADSL line from your router.

Go to: **Management -> Update Software** (See Figure 3.16)

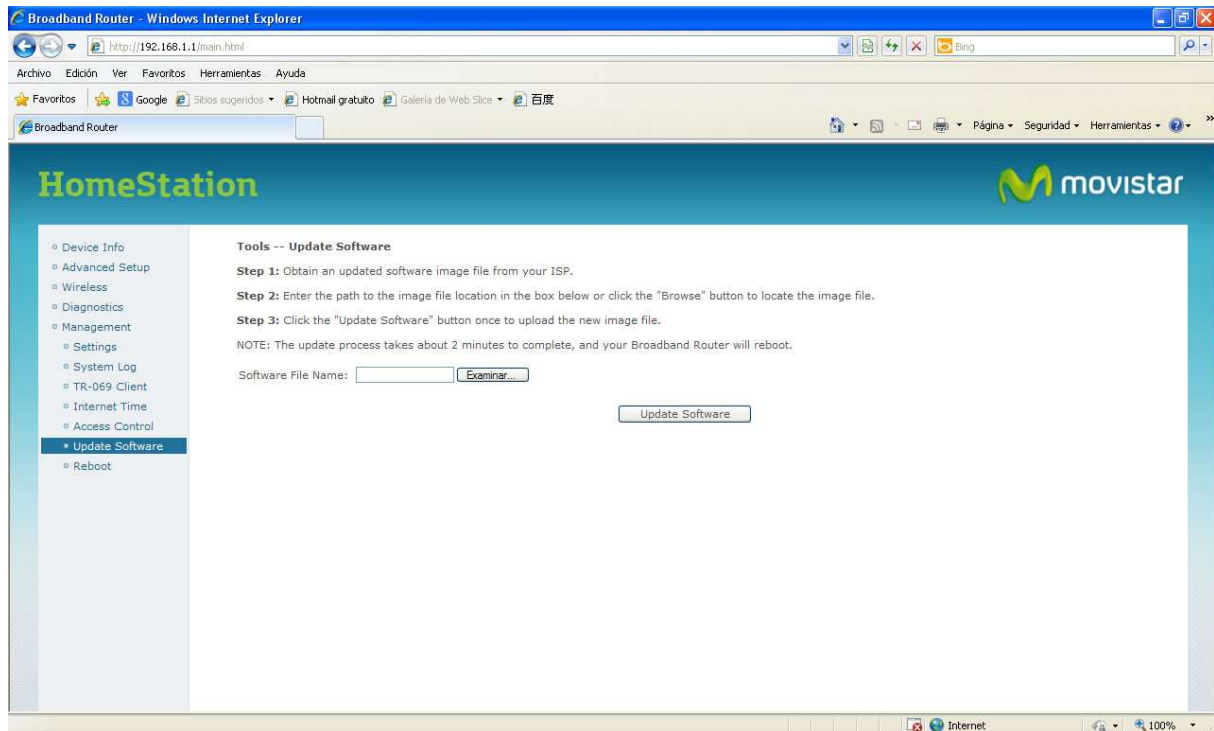**Figure 3-16: Firmware upgrade**

Press the *Examinar* button looking for the file containing the firmware in your PC and press *Upload Software*. The process will start and you will be informed about the process progress till it was completed. **REMIN**D not to switch off the router nor disconnect it from the PC during the upgrading process.

Wait few minutes for the router reboots. Once the router is initialized again, check the current settings and if it were necessary, reconfigure it again. Please don't forget to connect back the cable to your Broadband access connection.

4 USB INTERFACE

This device has built-in an USB 2.0 master port which allows end-users to increase the functionality of their access device. By one side, it is possible to connect a 3G modem to enable a backup access to the main DSL interface, through the mobile network; it also allows connect storage USB devices to share files between the users connected in the local network; and finally, it allows as well to act as printer server to allow users connected in the local network to print documents in any printer which could be connected to this USB port.

4.1 3G BACKUP

Through the USB port of this device it is possible to connect a 3G modem which could provide a backup line to the VDSL2 main line, to allow end-users could keep on enjoying the internet access according with the price rate contract for the 3G modem, in case of problems with the fixed line.

This device is completely compatible with the 3G modems Huawei E1752, Huawei E1752C, ZTE MF110 and ZTE MF190, which are possible to acquire to Movistar. To know if there are new compatible devices, as far as to clarify any other related detail, please check the webpage www.movistar.es/router.

The end-user will only need to connect a compatible 3G modem to the router USB port, and in case of problems with the VDSL2 access, it will be automatically redirected to some local pages in the router where it will be required to input the PIN code of the SIM card inserted in the 3G modem to continue surfing in internet through the mobile network according with the prices conditions acquired with the 3G modem.

The navigation rate with the 3G modem could depend in function of the coverage area where it were used.

4.2 FILE SHARING

It is also possible to connect to this USB port in the router, a external memory disk or a USB memory to be shared in the local network.

Once connected, it is possible to access the contents of the external disk or USB memory from any PC in the local network. To do that, it is only necessary to access through the Windows explorer, to the router LAN IP address, by default [\\192.168.1.1](http://192.168.1.1), to get the access to the shared contents.

It will be shown one shared folder with the contents of the external disk or USB memory, to easily surf through them.

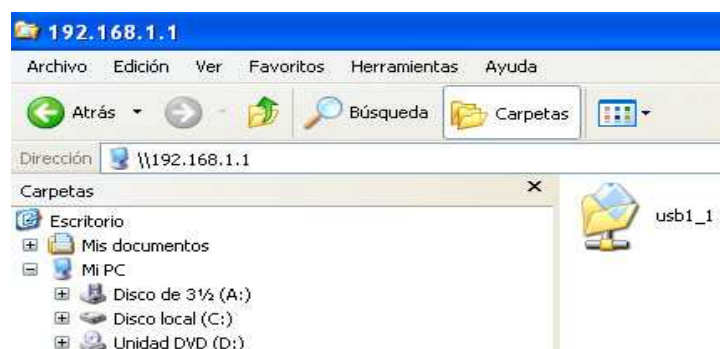


Figure 4-1: File sharing

It will be possible to access only to the primary partitions of the NTFS or FAT32 type of the disks connected, but not possible to access to secondary partitions or other types.

4.3 PRINTER SERVER

It will be possible also to connect a printer to the router USB port to share it with the other devices connected to the local network allowing them to print documents in the printer connected to the router.

To do that, it would be enough to connect a compatible printer to the router and to have the installation software of that printer on each one of the PCs connected in the local network.

It will be just necessary to follow the indications in the installation procedure of the printer software on each PC. If the installation software could require to connect the printer to the PC, keep in mind to ensure that what it will be necessary to ensure is that it is connected to the router.

The operating systems supporting this printer server feature are Windows 2000, Windows XP, Windows Vista, Windows 7 and MAC OS X or higher versions.

In next case, we will describe how to add manually a printer in the Windows 7 OS.

1.- Click **Start → Devices and printers** to open the *Devices and printers* screen. Click **Add a printer**.

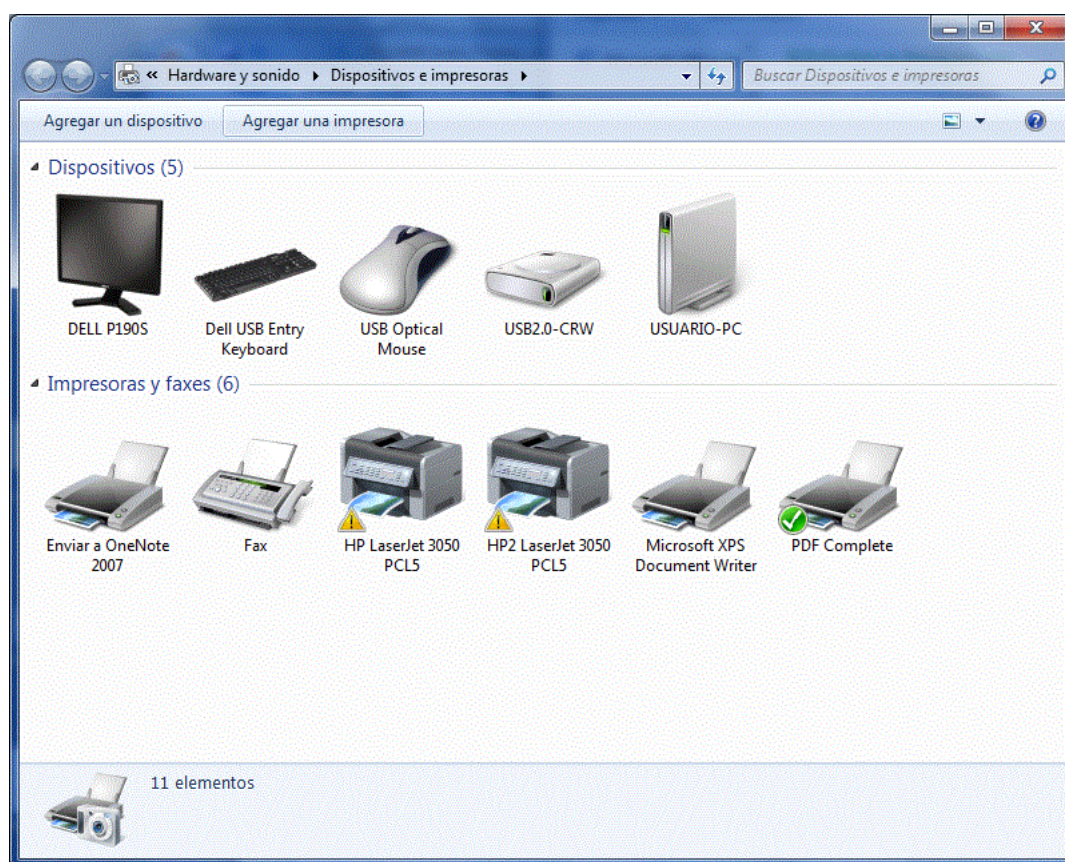


Figure 4-2: Printer installation – Step 1

2.- Select the option **Add a network printer, wireless or Bluetooth.**

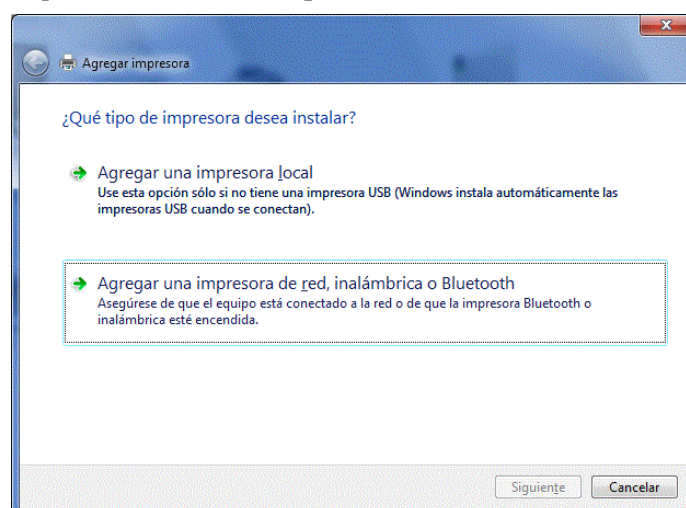


Figure 4-3: Printer installation – Step 2

3.- If the printer appears in the list of network printers which are automatically displayed, select that printer and go to step 5, if not, select the option **The desired printer is not in the list** and go to step 4.

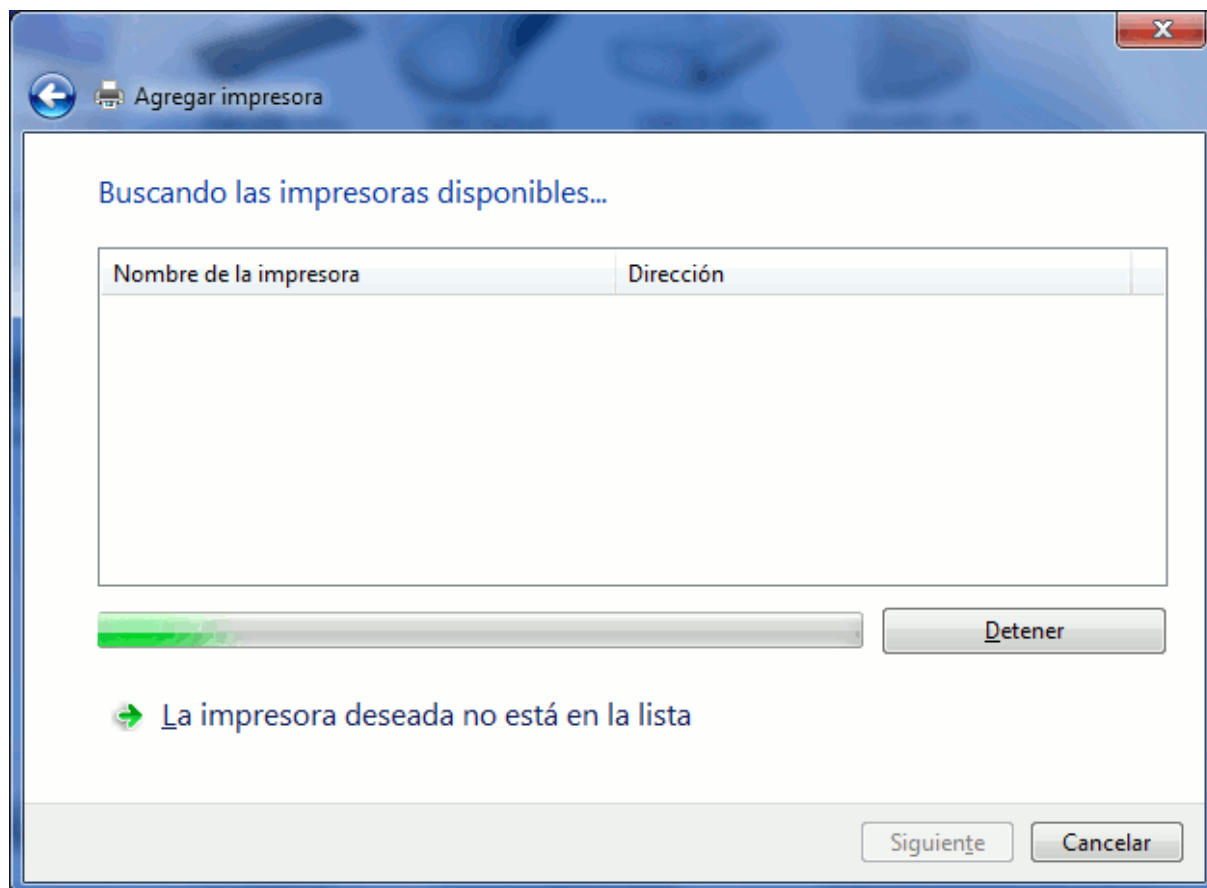


Figure 4-4: Printer installation – Step 3

4.- In this case, select **Select a shared printer by name**, and enter http://192.168.1.1:631/printers/USB_PRINTER as the URL access to the printer server. Click **Next**.

NOTE : If you change the Device's LAN IP address, use the new IP address in the above URL to access the printer server.

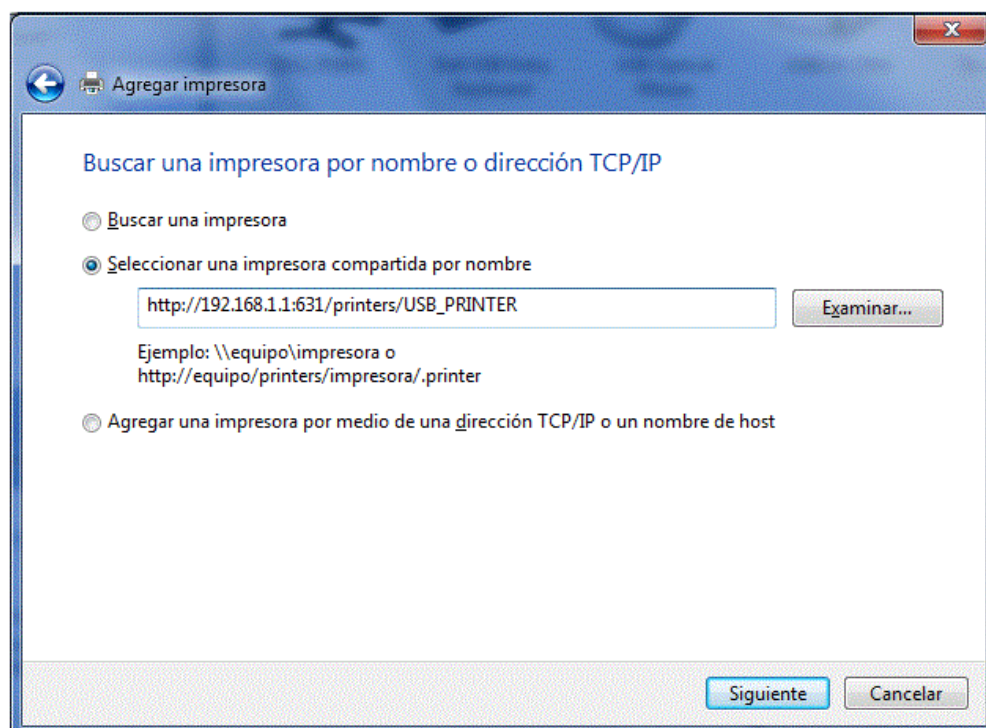


Figure 4-5: Printer installation – Step 4

5.- It is possible that the printer driver could be installed automatically or that could be necessary to select the brand of the printer which is connected to the CPE USB port, from the **printer brands** list.

6.- Also it could be necessary select the printer model within the list of **printers**.

7.- If your printer is not displayed in the list of **printers**, you must insert the printer driver installation CD or download the driver file to your computer, click **Have Disk...** and install the new printer driver.

8.- Click **Next** to continue.

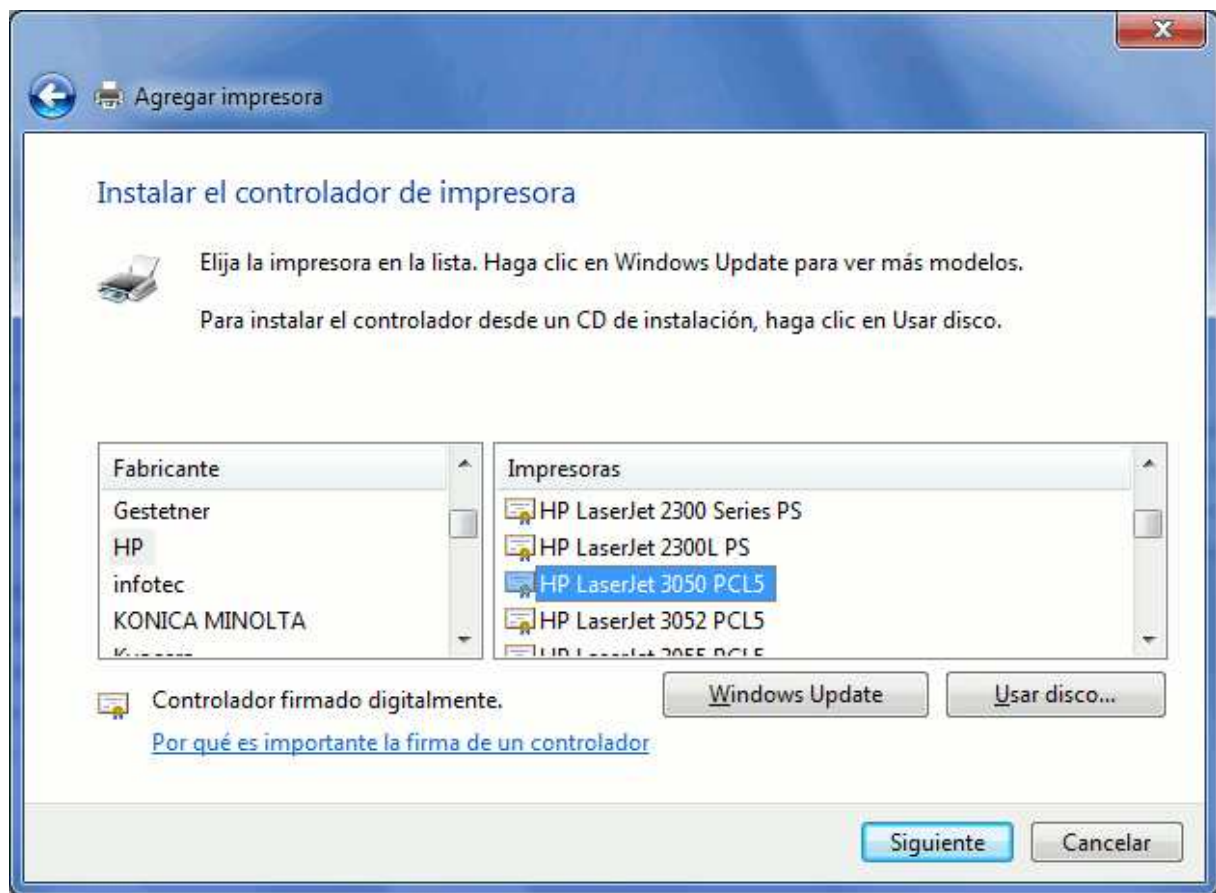


Figure 4-6: Printer installation – Step 5

9.- Once all the previous steps completed, select the option **Define as default printer** and then click the **Finish** button if you want to use this printer as the default printer on your computer. Otherwise do not select this option and then click **Finish** button.

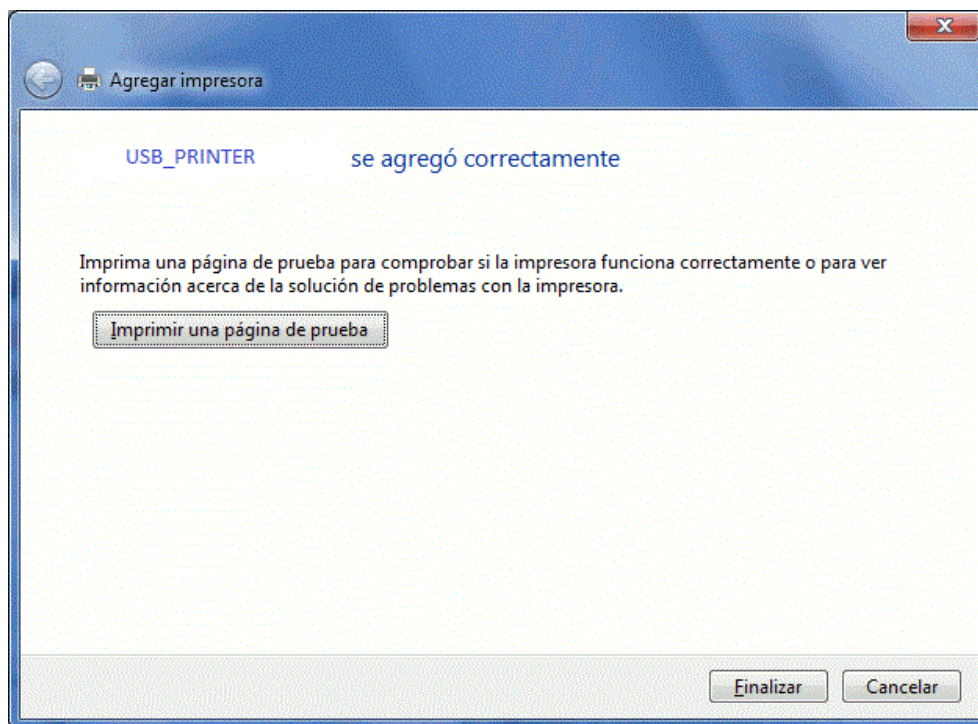


Figure 4-7: Printer installation – Step 6

10.- At the end, the following screen will appear showing the printer was successfully installed. Select **Finish** to complete the adding a new printer process.

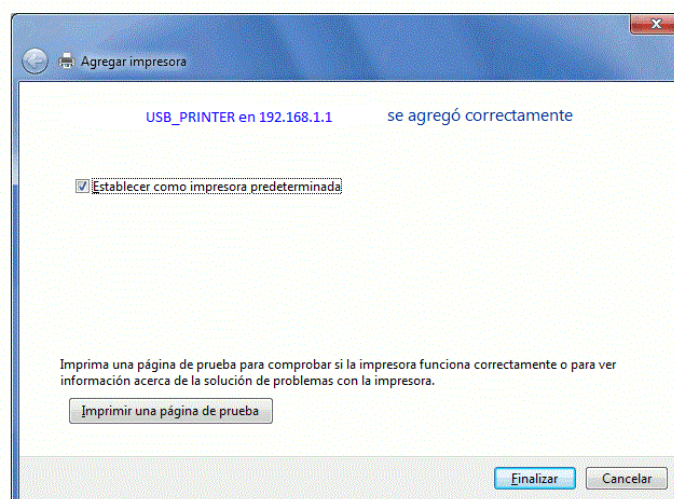


Figure 4-8: Printer installation – Step 7